WD8754EJ(A/F/G/H/S/V/W/Z)
WD8752EJ(A/F/G/H/S/V/W/Z)
WD8754RJ(A/F/G/H/S/V/W/Z)
WD8752RJ(A/F/G/H/S/V/W/Z)
WD8754CJ(A/F/G/H/S/V/W/Z)
WD8752CJ(A/F/G/H/S/V/W/Z)
WD8754DJ(A/F/G/H/S/V/W/Z)
WD8752DJ(A/F/G/H/S/V/W/Z)

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive a more complete service, please
register your product at

www.samsung.com/register

Planet First 100% Recycled Paper

SAMSUNG

features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its super-size capacity to its energy efficiency, the Samsung washing machine has all the features to turn a mundane chore into a pleasure.

- **Washing to drying with one button**

  Enjoy convenient non stop washing and drying. 4 different special drying programs can be selected to perform the whole wash cycle including the drying cycle using one button.
  - Cupboard(standard program), Low temp drying, Iron,Time Drying (30min ~ 270mins) Those drying programs also can be operated independently of washing programs.

- **Child Lock**

  The Child Lock function ensures that curious little hands are kept out of your washing machine.
  This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

- **Wool Certified**

  The machine has been tested and passed the required Woolmark Company specification for machine washable wool products.
  Fabrics should be washed according to the instructions on the garment label as specified by Woolmark and Samsung.

- **Delay End**

  Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

- **Quick Wash**

  No time to lose! Less than 30 minutes wash will give you time to run out before it's too late. Our 29 minute Quick Wash program can be the solution to your busy life. Now you can wash your favourite clothes in only 29 minutes!

- **Delicates & Hand Wash Program**

  Washes clothes at an appropriate temperature and amount of water,with a gentle wash action to take special care of your clothes.

- **Ceramic Heater for Durability & Energy Saving (selected models)**

  The ceramic heating element has a high resistance to hard water and detergents thereby ensuring it has a long life span.

WD8754RJF-02713L_EN.indd Sec1:2 2011-02-11 6:00:51

- **Air Wash**

  The Air Wash system deodorizes and sterilizes fabrics without getting them wet, opening up cleaning options for many non washable items. The sterilization function also kills the common household dust mite, offering relief for allergy sufferers.
  - Air-Refreshable : Cottons; Denims; Synthetics; Woollens – including coats, blankets, quilts, sweaters; suits; pillows; cushions; needlework; soft toys – such as teddy bears.
  - Not applicable : Leather, Silk, Velvet, Electric Blankets. This function will not remove stains from fabrics.

- **Digital Graphic Display**

  The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

- **Wide door**

  Extra wide door aperture for convenient viewing! Easily add and remove laundry, especially for large sized laundry items such as bedding, towels etc.

- **Direct Drive Motor**

  As the drum does not utilize belts or gears, vibrations are reduced significantly. This feature ensures that your washer machine is quieter and more durable.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The "Troubleshooting and information codes" section on page 35 tells you what to do if something goes wrong with your new washing machine.

WD8754RJF-02713L_EN.indd Sec1:3 2011-02-11 6:00:51

safety information

Congratulations on your new Samsung washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual.
Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.
Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

⚠ **WARNING**	Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage.**
⚠ **CAUTION**	Hazards or unsafe practices that may result in **personal injury and/or property damage**.
⚠ **CAUTION**	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

WD8754RJF-02713L_EN.indd Sec2:4 2011-02-11 6:00:52

Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.

WARNING This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

WD8754RJF-02713L_EN.indd Sec2:5 2011-02-11 6:00:54

safety information

WARNING SEVERE WARNING SIGNS FOR INSTALLATION

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 220-240V / 60Hz wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Failure Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install this appliance near a heater, inflammable material.
Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature
- Frost may cause tubes to burst

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.

WD8754RJF-02713L_EN.indd Sec2:6 2011-02-11 6:00:54

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.

CAUTION CAUTION SIGNS FOR INSTALLATION

This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.

WARNING SEVERE WARNING SIGNS FOR USING

If the appliance is flooded, cut the water supply and power immediately and contact your nearest service centre.

- Do not tough the power plug with wet hands
- Failure to do so may cause electric shock

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

WD8754RJF-02713L_EN.indd Sec2:7 2011-02-11 6:00:55

safety information

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock

---

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse(such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

When the water supply hose comes loose from the faucet and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.

WD8754RJF-02713L_EN.indd Sec2:8 2011-02-11 6:00:55

CAUTION SIGNS FOR USING

When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.
- Failure to do so may result in discoloration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.
- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the faucet slowly.
Open the faucet slowly after a long period of non-use.
- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.
- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.
- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the faucet is turned off when the washer is not being used.
- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Check if the rubber seal is not contaminated by foreign substances (waste, thread, etc).
- If the door is not closed completely, it may result in water leakage.

Open the faucet and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.
- If the screws or the water supply hose connector are loose, it may result in water leakage.

To reduce the risk of fire or explosion:
- Under certain conditions, hydrogen gas may be produced in a hot water system such as your hot water heater that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water taps in your home, and let the water flow for several minutes before using your washing machine. This will release any hydrogen gas build–up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time. Ventilate immediately without touching the power plug if there is a gas leak.

WD8754RJF-02713L_EN.indd Sec2:9 2011-02-11 6:00:56

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.
- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.
- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.
- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.
- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

* Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.
- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.
- This may result in burns.

Do not insert your hand into the detergent box after opening it.
- This may result in injury as your hand may be caught by the detergent input device.Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.
- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.
- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.
- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.
- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.
- This may result in problems with the washer.

WD8754RJF-02713L_EN.indd Sec2:10 2011-02-11 6:00:56

Do not use natural hand-washing soap for the washer.
- If it hardens and accumulates inside the washer, it may result in problems with the product, discoloration, rust or bad odors.

Do not wash large laundry items such as bedding in the washing net.
- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.
- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.
- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.

WARNING SEVERE WARNING SIGNS FOR CLEANING

Do not clean the appliance by spraying water directly onto it.
Do not use benzene, thinner or alcohol to clean the appliance.
- This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.
- Failure to do so may result in electric shock or fire.

WD8754RJF-02713L_EN.indd Sec2:11 2011-02-11 6:00:56

contents

SETTING UP YOUR WASHING MACHINE 13

13 Checking the parts
14 Meeting installation requirements
14 Electrical supply and grounding
14 Water Supply
15 Drain
15 Flooring
15 Surrounding temperature
15 Alcove or closet installation
15 Installing your washing machine

WASHING A LOAD OF LAUNDRY 21

21 Washing for the first time
21 Basic instructions
22 Using the control panel
25 Child lock
25 Sound off
25 Delay end
25 Drain Only Fuction
26 Air Wash
27 Drying
29 Washing clothes using the cycle selector
29 Washing clothes manually
30 Laundry guidelines
31 Detergent and additives information
31 Which detergent to use
31 Detergent drawer

CLEANING AND MAINTAINING YOUR WASHING MACHINE 32

32 Draining the washing machine in an emergency
32 Cleaning the exterior
33 Cleaning the detergent drawer and drawer recess
33 Cleaning the debris filter
34 Cleaning the water hose mesh filter
34 Repairing a frozen washing machine
34 Storing your washing machine

TROUBLESHOOTING AND INFORMATION CODES 35

35 Check these points if your washing machine...
36 Information codes

CYCLE CHART 37

37 Cycle chart

APPENDIX 38

38 Fabric care chart
38 Protecting the environment
38 Declaration of conformity
39 Specifications

WD8754RJF-02713L_EN.indd Sec3:12 2011-02-11 6:00:56

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

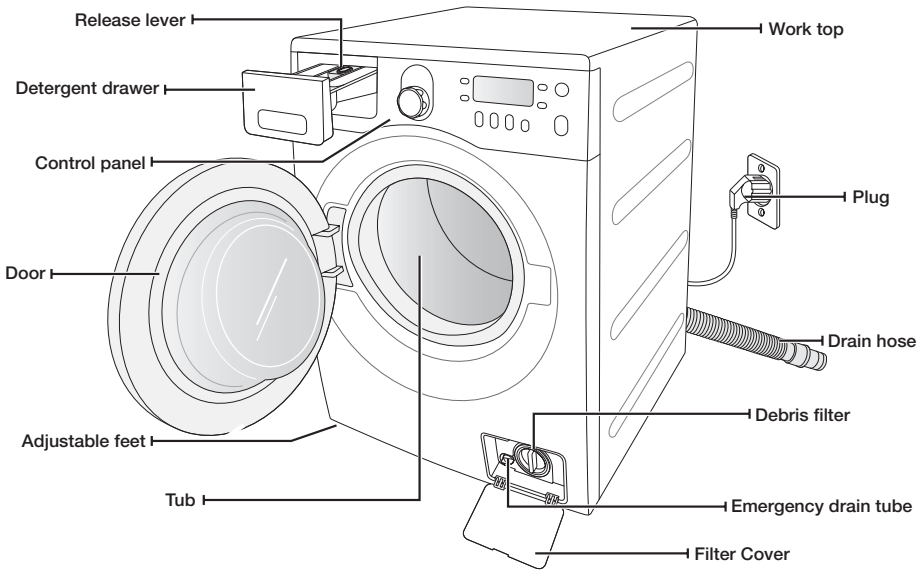

Spanner | * Bolt hole covers | Water supply hose | Hose guide

*** Bolt hole covers** : The number of bolt hole covers depends on the model (3~5 covers).

WD8754RJF-02713L_EN.indd Sec4:13 2011-02-11 6:00:57

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.

WARNING Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:
- AC 220-240V / 60Hz fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.
Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock.
Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 4 feet (122cm) of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.

Most plumbing supply stores sell inlet hoses of various lengths up to 10 feet (305cm) long.

You can reduce the risk of leaks and water damage by:
- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.

WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

WD8754RJF-02713L_EN.indd Sec4:14 2011-02-11 6:00:58

Drain

Samsung recommends a standpipe height of 65 cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm	Rear – 51 mm
Top – 25 mm	Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1
Selecting a location

Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 32 ˚F or 0 ˚C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord

WD8754RJF-02713L_EN.indd Sec4:15 2011-02-11 6:00:59

setting up your washing machine

STEP 2
Removing the shipping bolts

Before installing the washing machine, you must remove all shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

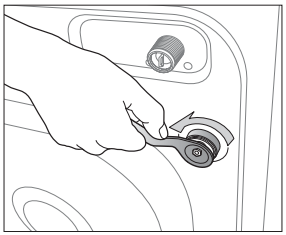

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

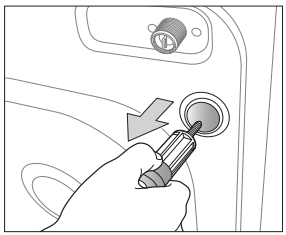

3. Fill the holes with the supplied plastic covers.

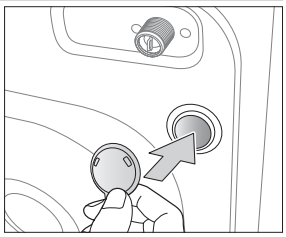

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

WD8754RJF-02713L_EN.indd Sec4:16 2011-02-11 6:00:59

STEP 3
Adjusting the levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.
2. Level your washing machine by turning the leveling feet in and out as necessary by hand.

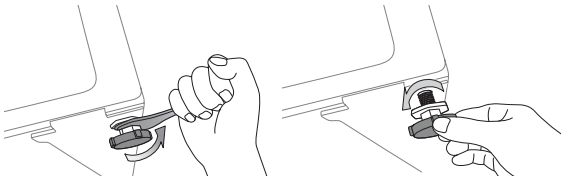

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

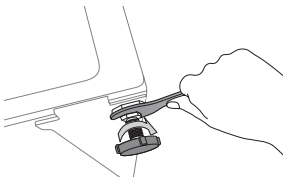

STEP 4
Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

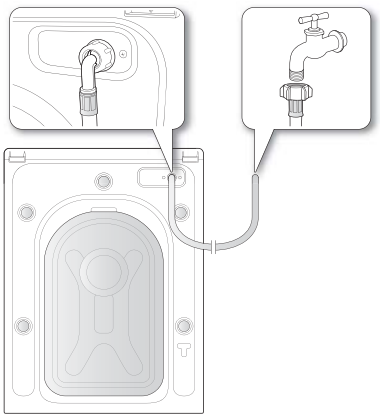

The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WD8754RJF-02713L_EN.indd Sec4:17 2011-02-11 6:01:00

setting up your washing machine

Connecting the water supply hose (selected models)

1. Remove the adaptor from the water supply hose.

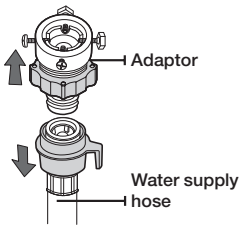

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.



3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

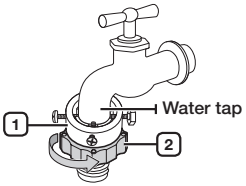

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

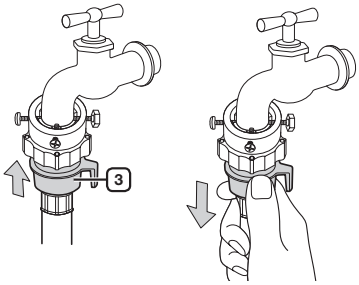

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

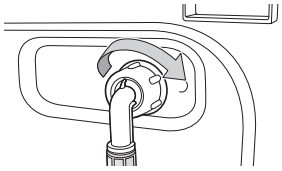

WD8754RJF-02713L_EN.indd Sec4:18 2011-02-11 6:01:02

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

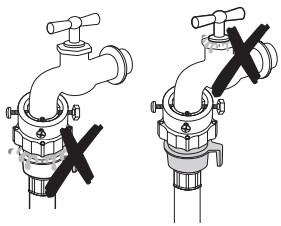

WARNING Do not use your washing machine if there is a water leaks. This may cause electric shock or injury.

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

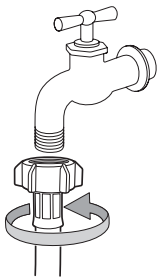

Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

WD8754RJF-02713L_EN.indd Sec4:19 2011-02-11 6:01:03

setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

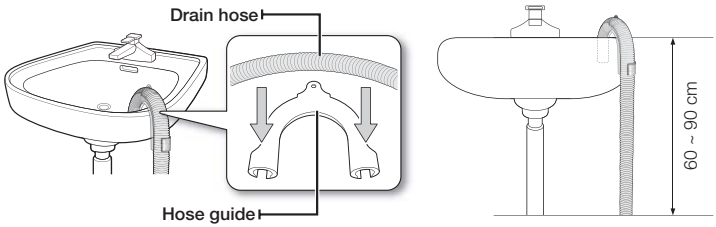

2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

The standpipe drain requires;

- minimum diameter 5 cm.
- minimum carry-away capacity 60 liter per minute.

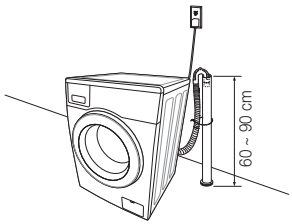

STEP 5

Powering your washing machine

Plug the power cord into a wall sockets, an AC 220-240V / 60Hz approved electrical outlet protected by a fuse or circuit breaker. (For more information on electrical and grounding requirements, see page 14.)

WD8754RJF-02713L_EN.indd Sec4:20 2011-02-11 6:01:04

washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment Ⅱ in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

This will remove any water that might be left over in the machine from the manufacturer's test run.

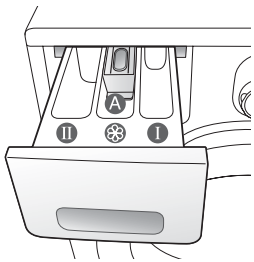

Compartment Ⅰ: Detergent for prewash, or starch.
Compartment Ⅱ: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.
Compartment ❀: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

WARNING Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 30.

- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not wash water-proofed items.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
   The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

WD8754RJF-02713L_EN.indd Sec5:21 2011-02-11 6:01:06

washing a load of laundry

USING THE CONTROL PANEL

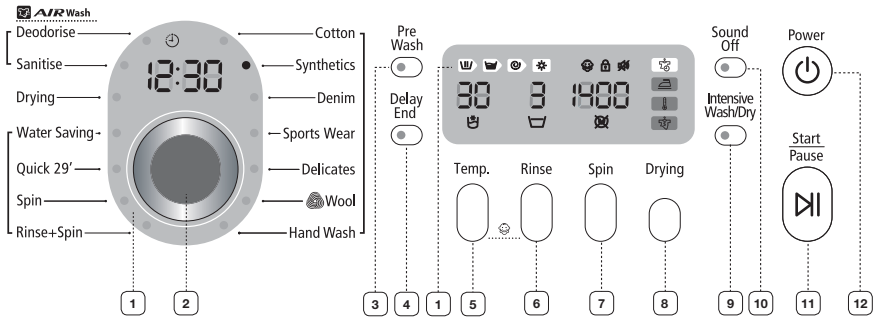

1 **DIGITAL GRAPHIC DISPLAY**	Displays the remaining wash cycle time, all cycle information, and error messages.
2 **CYCLE SELECTOR**	Select the tumble pattern and spin speed for the cycle. For detailed information, refer to "Washing clothes using the cycle selector". (see page 29) **Cotton** - For lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc. **Synthetics** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends. **Denim** - A higher water level in the main wash and extra rinse ensure that no washing powder remains that may mark your clothing. **Sports Wear** - Use for water-proofed or proofed garments to keep their good looks and fresh feel. **Delicates** - For sheer fabrics, brassieres, lingerie, dresses, shirts and blouses. For best results, use liquid detergent. **Wool** - Only for machine-washable wool. A load should be less than 2.0 kg. • The wool course washes the laundry using gentle cradling actions. During the wash, the gentle cradling and soaking actions are continued to protect the wool fibers from shrinkage / distortion and for a super gentle clean. This stop operation is not a problem. • Neutral detergent is recommended for wool course, for improved washing results and for improved care of the wool fibers. The wool wash cycle of this machine has been approved by Woolmark for the washing of machine-washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M0509 (Certificate Number issued by IWS NOM INEE Co., Ltd.) **Handwash** - A very light wash cycle as gentle as a hand wash. **Air Wash** - Use this system to deodorize or sanitize fabrics excluding silk, leather and velvet. • Deodorise cycle – Removes odours from laundry • Sanitise cycle – Removes odours and bacteria from laundry **Drying** - Dry only function. Will dry clothes without washing them first. Uses a sensor to determine drying time. **Water Saving** - This is a specially designed course that enables you to wash laundry effectively with the minimum amount of water. The energy label specifications have been determined by using the following program. The program is Water Saving 40, 3 Rinses, Intensive,and 1400rpm.

WD8754RJF-02713L_EN.indd Sec5:22 2011-02-11 6:01:07

	Quick 29' - Washes laundry in 29 minutes. For lightly soiled garments. **Spin** - Performs an additional spin cycle to remove more water. **Rinse + Spin** - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load. **Drain Only** - Turn the **Cycle Selector** to the Spin position, press the **Spin** button, and then press the **Start/Pause** button to drain the water.
3 **PREWASH SELECTION BUTTON**	Press this button to select pre-wash. Pre-wash is only available with: Cotton, Synthetics, Denim, Sports Wear.
4 **DELAY END SELECTION BUTTON**	Press this button repeatedly to cycle through the available Delay End options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.
5 **TEMPERATURE SELECTION BUTTON**	Press this button repeatedly to cycle through the available water temperature options: (Cold Water, 30 ℃, 40 ℃ , 60 ℃ and 95 ℃).
6 **RINSE SELECTION BUTTON**	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
7 **SPIN SELECTION BUTTON**	Press the button repeatedly to cycle through the available speeds for the spin cycle. WD8754: Rinse Hold, No spin, 400, 800, 1200, 1400 rpm WD8752: Rinse Hold, No spin, 400, 800, 1000, 1200 rpm "No spin" - The laundry remains in the drum and no spin cycle is performed after the final drain. "Rinse Hold" -The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.
8 **DRYING BUTTON**	Only include items that are suitable for both washing and drying when using the wash + dry program, as non dryable items may be deformed, even at low temperatures. Cup Board → Low Temp → Iron → Time Dry (47min. → 1:17min.→ 1:47min. → 2:17min. → 2:47min. → 3: 17min. → 3: 47min. → 4: 17min.→ 4:47min.) → Cup Board "Cup Board" - Clothes are dried to a level that is suitable for them to be placed directly in the cupboard at the end of the cycle. Using sensors, the machine will automatically set the length of time required to dry laundry. "Low Temp" - Designed for heat sensitive items. Dries laundry at a lower temperature using sensor to determine drying time. "Iron" - Suitable for laundry that will be ironed immediately after cycle end. Leaves laundry slightly moist to make ironing easier. Sensor determines drying time. "Time Dry" -Allows you to select the length of drying time (30min. → 60min. → 90min. → (47min. → 1:17min. → 1:47min. → 2:17min. → 2:47min.→3: 17min. → 3: 47min.→ 4: 17min.→ 4:47min.) • You must avoid washing laundry that may not be dried as it may be deformed even at low temperatures. • The Cup Board, Low Temp, Iron and Time Dry options detect the weight of the laundry in order to display an accurate drying time and dry them more completely. • The drying conditions may differ depending on the type and the amount of laundry.

WD8754RJF-02713L_EN.indd Sec5:23 2011-02-11 6:01:09

washing a load of laundry

9 **INTENSIVE WASH / DRY SELECTION BUTTON**	Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle. Turn the Cycle Selector to the Drying position and press this button to use the 4 kg high-capacity drying function.
10 **SOUND OFF BUTTON**	The sound can be turned off for all courses. When this function is selected, the sound is turned off for all cycles. • When the Sound off function is activated, the lamp on the **Sound Off** button and the control panel are illuminated. • When the Sound off function is deactivated, a buzzer will go off, and the lamp on the button and the control panel is turned off.
11 **START/PAUSE SELECTION BUTTON**	Press to pause and restart a cycle.
12 **POWER BUTTON**	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WD8754RJF-02713L_EN.indd Sec5:24 2011-02-11 6:01:12

Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. "**Child Lock**" will be lit when this feature is activated. so it communicates that the Child Lock icon will be lit when the feature is activated.

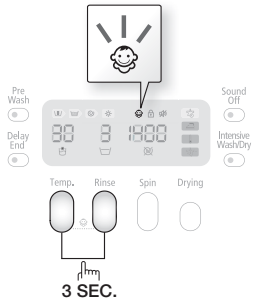

When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after disconnecting and reconnecting the power cord.

Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the Sound Off function, press the **Sound Off** button. The lamp on the **Sound Off** button and the control panel will be lit when this feature is activated.

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "**Delay End**" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

Drain Only Fuction

When you want just drain water from washing machine, follow directions below.

1. Press the **Power** button
2. Turn the Cycle Selector to the Spin positio.
3. Press the **Spin** button 1 times until rpm sign is off.
4. Then "1" shows up on time display in center.
5. Press the **Start/Pause** button.

WD8754RJF-02713L_EN.indd Sec5:25 2011-02-11 6:01:12

Air Wash

The Air Wash system deodorizes and sterilizes fabrics without getting them wet, opening up cleaning options for many non washable items. The sterilization function also kills the common household dust mite, offering relief for allergy sufferers.

- **Air Washable items:** Cottons; Denims; Synthetics; Woollens – including coats, blankets, quilts, sweaters; suits; pillows; cushions; needlework; soft toys – such as teddy bears.
- **Non Air Washable items:** Leather, Silk, Velvet, Electric Blankets.

- This function will not remove stains from fabrics.
- Suitable only for two or less items at a time (less than 1kg)

1. Open the door, place the laundry into the washing machine and close the door.
2. Press the **Power** button.
3. Select **Air Wash** by turning the **Cycle Selector**.
   - Each time the button is pressed, the operating mode cycles through the following sequence: Deodorise, Sanitise ...

MODE	CYCLE TIME
Deodorise	29 min
Sanitise	59 min

- When one of these options has been selected, no other button can be selected and you can only select the delay end time from between 3:00 – 19:00.

4. Close the door and press the **Start/Pause** button.

- When there is water in the tub, **Air Wash** cannot be selected. Drain the water and select **Air Wash**.
- Press the **Start/Pause** or **Power** button to remove the laundry.
- Fragrance or dryer sheets can be used with Air Wash programs to add fragrance to your refreshed laundry (one sheet per one or two items).

Avoid Air Wash the following clothes:

- Sensitive clothes made of leather, mink, fur, silk, etc.
- Underwear trimmed with lace, 'glued' doll cushions, and dress suits may have their decorations loosened.
- Clothes trimmed with buttons can cause them to break.
- Starchy clothes can become deformed.
- Hard bedding such as a wooden pillows (neck-rest)
  - Pillows or blankets filled with plastic or starch rather than cotton
  - Electric blankets
- Furry blankets
- Bulky blankets
- Latex pillow

WD8754RJF-02713L_EN.indd Sec5:26 2011-02-11 6:01:15

DRYING

Refer to the label of drying capacity and be sure to put in the clothes to the lower level than the marked line for the dried clothe of 4.0kg.

1. Open the door, put in the clothes and close the door again.
2. Press the **Power** button and then press the **Drying** button.
   : The standard course will be selected automatically.
   Drying is availably selected only at the courses Such as cotton, synthetics, denim and sports wear.
3. Select **Drying** button as follows.
   Drying Programs

   - Every press of this button will select drying type repeatedly in the following order: Cup Board → Low Temp → Iron → Time Dry (47min. →1:17min. → 1:47min. → 2:17min. → 2:47min. → 3: 17min. → 3: 47min. → 4: 17min. → 4:47min.) → Cup Board

- This combo allows you the choice of wash + dry or dry only options.
- The wash + dry course is available for the following wash courses only: Cotton, Intensive, Quick
- Before drying clothes, refer to the clothes label to ensure they are suitable for drying.
- The dryer is capable of drying up to 4kg's of clothes (ie weight of dry clothes). The drying function will not perform satisfactorily if this limit is exceeded.
- Auto dry and Time Dry drying options are available.
- The Auto Dry options (Cupboard, Low Temp. Iron) activate sensors that weigh the clothes and determine / set optimal drying time.
- The Time Dry option allows you to manually select the length of drying time. The drying time options are: (47min.→ 1 :17min. → 1:47min. → 2:17min. → 2:47min. → 3: 17min. → 3: 47min. → 4: 17min. → 4:47min.)
- For laundry weighing less than 3.5kg, an Auto Dry course is recommended.
- When drying laundry that weighs between 3.5kg and 4kg the Time Dry option is recommended.
- The selected course can not be changed after the machine has started drying
- If you run a wash + dry course, the SPIN speed will automatically be set to High regardless of the wash course you have selected, in order to improve drying performance
- If cold water is not supplied to the machine, the drying function will not work. Please ensure the water valve is opened when using the drying function.
- If you want to dry after hand wash course press both Spin and Dry functions at the same time.
- The wrinkle prevention function is activated automatically if the clothes are not removed from the drum immediately after drying has ended. The wrinkle prevention function will run for 30 mins. with (End) on the display panel. To take the clothes out when this function is activated, press the Start/Pause or Power button to enable the door to open.

Drying Time

Drying Type		Information	Max Load	Drying Time (Max Load)
Auto Drying	Cupboard ( )	1. Rotate jog dial until Drying light illuminates 2. Press **Intensive Wash/dry** button	3.5 kg	177min.
	Cupboard	1. Rotate jog dial until Drying light illuminates 2. Press Intensive Wash button 3. Press **Start/Pause** button	3.5kg - 4.0kg	257min.
	Low Temp. ( )	1. Rotate jog dial until Drying light illuminates 2. Press Drying button until Low Temp. option illuminates 3. Press **Start/Pause** button	2.0kg	177min.
	Iron ( )	1. Rotate jog dial until Drying light illuminates 2. Press Drying button until Iron option illuminates 3. Press **Start/Pause** button	2.0kg	47min.
Time Drying ( )		1. Rotate the jog dial until Drying light illuminates 2. Press Drying button until Time Dry option illuminates 3. Continue to press Drying button until the drying time you require is illuminated 4. Press the **Start/Pause** button	4.0kg	287min.

WD8754RJF-02713L_EN.indd Sec5:27 2011-02-11 6:01:15

Wash + Dry

This is the cycle time for drying only, please refer to page 37 for the cycle wash time.

Drying Type		Information	Max Load	Drying Time (Max Load)
Auto / Sensor Drying	Cupboard (☆)	1. Place suitable amount of detergent and fabric softener in the detergent tray and close it again. 2. Rotate jog dial until your desired wash cycle is illuminated (cotton, synthetics, denim and sports wear) 3. Press **Start/Paus**e button	3.5kg	177min.
	Cupboard	1. Place suitable amount of detergent and fabric softener in the detergent tray and close it again. 2. Rotate jog dial until your desired wash cycle is illuminated (cotton, synthetics, denim and sports wear) 3. Press **Intensive Wash/dry** button 4. Press **Start/Pause** button	3.5kg - 4.0kg	257min.
	Low Temp. ( )	1. Place suitable amount of detergent and fabric softener in the detergent tray and close it again. 2. Rotate jog dial until your desired wash cycle is illuminated (cotton, synthetics, denim and sports wear) 3. Press **Drying** button until Low Temp. option illuminates 4. Press **Start/Pause** button	2.0kg	177min.
	Iron ( )	1. Place suitable amount of detergent and fabric softener in the detergent tray and close it again. 2. Rotate jog dial until your desired wash cycle is illuminated (cotton, synthetics, denim and sports wear) 3. Press **Drying** button until Iron option illuminates 4. Press **Start/Pause** button	2.0kg	47min.
Time Drying ( )		1. Place suitable amount of detergent and fabric softener in the detergent tray and close it again. 2. Rotate the jog dial until your desired wash cycle is illuminated (cotton, synthetics, denim and sports wear) 3. Press **Drying** button until Time Dry option illuminates 4. Continue to press Drying button until the drying time you require is illuminated 5. Press the **Start/Pause** button	4.0kg	287min.

- It automatically displays Drying Time by sensing the weight of clothes before drying for increasing the drying effect.
- If both the spin and drying cycles are selected, the spin speed is automatically selected to enhance the drying efficiency.
- When using the drying cycle, check if the water supply valve is opened.
  When selecting the Drying function only, the Spin cycle is automatically performed first to enhance the drying efficiency.

4. Put suitable amount of detergent and fiber softener in the detergent tray and close it again.

5. Press **Start/Pause** button.

: It automatically performs an optimal function from washing to drying.

- The selected course can't be altered after the start of drying.
- If you select Drying function, the intensity of SPIN will be set up as High in default for increasing the drying effect.
- If cold water is not supplied, drying will not be performed.
- If you do not take out clothes from the tub after the end of drying, a function of wrinkle protection will be performed for about 30 minutes with the display of [End]. In order to take out the clothes: press firstly Start/Pause or Power button and take them out.
- In case you wish to dry after hand washing, select both Spin and Dry at the same time.

WD8754RJF-02713L_EN.indd Sec5:28 2011-02-11 6:01:17

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

Pre-wash is only available when selecting the Cotton, Synthetics, Denim, Sports Wea cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton, Synthetics, Denim, Sports Wear, Delicates, Wool, Hand Wash, Quick 29'. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.

The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp.** button to select the temperature. (Cold water, 30 ˚C, 40 ˚C, 60 ˚C, 95 ˚C)
8. Press the **Rinse** button to select the required number of rinse cycles.
   The maximum number of rinse cycles is five.
   The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.
   The rinse hold function allows you to remove items that are still wet from the washing machine. (⊗ : No Spin, ⎁ : Rinse Hold)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

WD8754RJF-02713L_EN.indd Sec5:29 2011-02-11 6:01:18

washing a load of laundry

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cottons, mixed fibres, synthetics, silks, wools and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects. Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing. Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

Determining the load capacity

Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity
Model	WD8754 / WD8752
Cotton - average/lightly soiled - heavily soiled	7.5 kg
Synthetics	3.0 kg
Denim	3.0 kg
Sports Wear	2.5 kg
Delicates	2.5 kg
Wool	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvets, the wash time may be lengthened or the spin efficiency may be degraded.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

CAUTION Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

WD8754RJF-02713L_EN.indd Sec5:30 2011-02-11 6:01:19

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use “low suds” laundry detergent, which is designed for front load washing machines.
Follow the detergent manufacturer’s recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.
To ensure maximum cleaning results, it is recommended that powdered detergent should be thoroughly dissolved in a small amount of water before adding to the machine.

Do not use detergent that has hardened or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Please note the following when using the Wool course.

- Use a neutral liquid detergent for wool only.
- When using a powder detergent, it may remain on the laundry and cause damage to the material (wool).

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

Do NOT open the detergent drawer when your washing machine is running.

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment Ⅱ before starting your washing machine.
3. Add the recommended amount of fabric softener into the softener compartment ❀ if required.

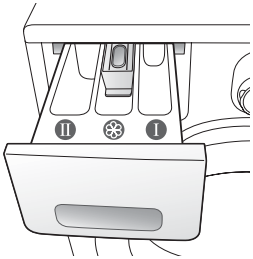

CAUTION Do NOT add any powder/liquid **detergent** to the softener compartment (❀).

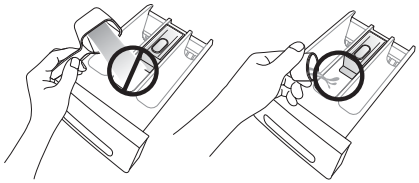

4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment Ⅰ.

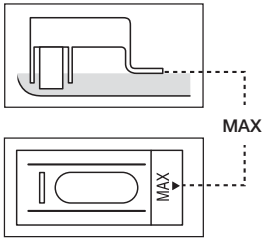

When washing large items do NOT use the following detergent types.

- Tablet and capsule type detergents
- Detergents using a ball and net

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked.)

Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.

WD8754RJF-02713L_EN.indd Sec5:31 2011-02-11 6:01:20

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover using a coin or a key.

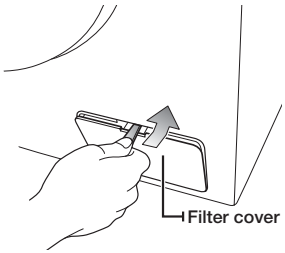

3. Unscrew the emergency drain cap by turning it to the left.

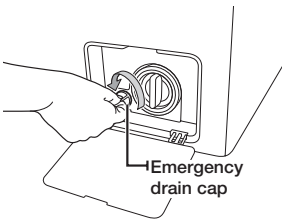

4. Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
5. Allow all the water to flow into a bowl.
6. Reinsert the drain tube and screw the cap back on.
7. Replace the filter-cover.

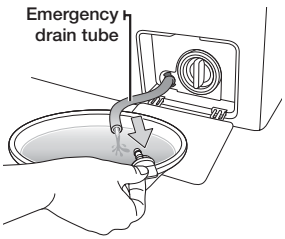

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

WD8754RJF-02713L_EN.indd Sec6:32 2011-02-11 6:01:23

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the liquid detergent divider from the detergent drawer

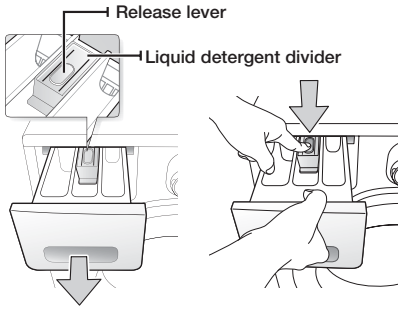

3. Wash all parts under running water.

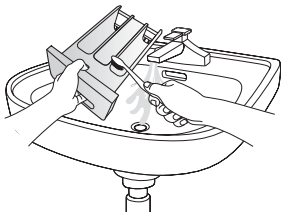

4. Clean the drawer recess with an old toothbrush.
5. Replace the liquid detergent divider by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

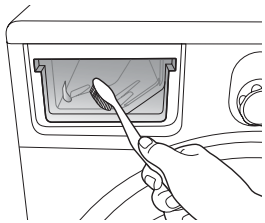

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous page.)

1. Open the filter cover by using a key or coin.
2. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
3. Unscrew the debris filter cap.

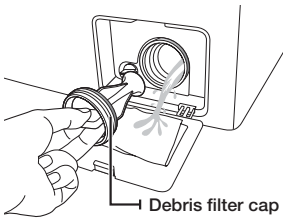

4. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
5. Replace the debris filter cap.
6. Replace the filter cover.

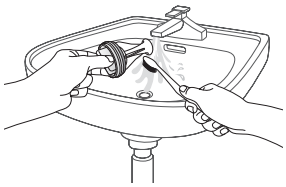

WD8754RJF-02713L_EN.indd Sec6:33 2011-02-11 6:01:24

cleaning and maintaining your washing machine

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of "4E" is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it's better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the Quick 29' cycle and add bleach to the bleach compartment. Run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.

If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

WD8754RJF-02713L_EN.indd Sec6:34 2011-02-11 6:01:26

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remains in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• The door will not open until 3 minutes after the machine stops or the power turns off.

If the problem persists, contact your local Samsung Customer Service.

WD8754RJF-02713L_EN.indd Sec8:35 2011-02-11 6:01:26

troubleshooting and information codes

INFORMATION CODES

When your washing machine malfunctions, you may see an information code on the display. If that happens, check this table and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Close the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an “UE” error message will be shown in the display window.
cE/3E	• Call the after-sales service.
Hot	• It appears when the internal temperature of the drum is high. The fan will automatically function, so just wait until “**Hot**” indication disappeared.

For any codes not listed above, or if the suggested solution doesn’t fix the problem, call your Samsung Service Centre or local Samsung dealer.

WD8754RJF-02713L_EN.indd Sec8:36 2011-02-11 6:01:26

CYCLE CHART

(● user option)

PROGRAM	Max load(kg)	DETERGENT			Max Temp (℃)
	WD8754/ WD8752	Pre-wash	wash	Softener	
Cotton	7.5	●	yes	●	95
Synthetics	3.0	●	yes	●	60
Denim	3.0	●	yes	●	60
Sports Wear	2.5	●	yes	●	60
Delicates	2.5	-	yes	-	40
Wool	2.0	-	yes	-	40
Handwash	2.0	-	yes	●	40
Deodorise	1.0	-	-	-	(not displayed)
Sanitise	1.0	-	-	-	(not displayed)
Drying	4.0	-	-	-	(not displayed)
Water Saving	7.5	●	yes	●	60
Quick 29’	3.0	-	yes	●	60

PROGRAM	Spin Speed(MAX) rpm		Delay end	Cycle time (min)
	WD8754	WD8752		
Cotton	1400	1200	●	120
Synthetics	1200	1200	●	90
Denim	800	800	●	78
Sports Wear	1200	1200	●	72
Delicates	800	800	●	50
Wool	800	800	●	38
Handwash	400	400	●	31
Deodorise	-	-	●	29
Sanitise	-	-	●	59
Drying	-	-	●	257
Water Saving	1400	1200	●	199
Quick 29’	1400	1200	●	29

1. A cycle with a prewash takes approx. 15 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Course time in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
4. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

WD8754RJF-02713L_EN.indd Sec7:37 2011-02-11 6:01:26

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing, and dry cleaning when necessary.
The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundering problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
	Item may be washed at 95 ˚C		Can be dry cleaned using any solvent
	Item may be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manu-facturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

WD8754RJF-02713L_EN.indd Sec9:38 2011-02-11 6:01:27

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE	
DIMENSIONS			WD8754CJ/WD8754DJ/WD8754EJ/WD8754RJ WD8752CJ/WD8752DJ/WD8752EJ/WD8752RJ	
			W598mm X D600mm X H844mm	
WATER PRESSURE			50 kPa ~ 800 kPa	
WATER VOLUME			56 ℓ	
NET WEIGHT			WD8754CJ/ WD8754DJ/ WD8754EJ/ WD8754RJ	WD8752CJ/ WD8752DJ/ WD8752EJ/ WD8752RJ
			70 kg	69 kg
WASH AND SPIN CAPACITY			7.5 kg [DRY LAUNDRY]	
DRY CAPACITY			4.0 kg	
POWER CONSUMPTION	MODEL		WD8754CJ/WD8754DJ/WD8754EJ/WD8754RJ WD8752CJ/WD8752DJ/WD8752EJ/WD8752RJ	
	WASHING		220 V	150 W
			240 V	150 W
	WASH AND HEATING		220 V	2000 W
			240 V	2400 W
	DRYING		230V	1600W
	SPIN	MODEL	WD8754CJ/ WD8754DJ/ WD8754EJ/ WD8754RJ	WD8752CJ/ WD8752DJ/ WD8752EJ/ WD8752RJ
		230V	350 W	250 W
	PUMPING		34 W	
PACKAGE WEIGHT	MODEL		WD8754CJ/WD8754DJ/WD8754EJ/WD8754RJ WD8752CJ/WD8752DJ/WD8752EJ/WD8752RJ	
	PAPER		2.5 kg	
	PLASTIC		2.5 kg	
SPIN REVOLUTIONS	MODEL		WD8754CJ/ WD8754DJ/ WD8754EJ/ WD8754RJ	WD8752CJ/ WD8752DJ/ WD8752EJ/ WD8752RJ
	rpm		1400	1200

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WD8754RJF-02713L_EN.indd Sec9:39 2011-02-11 6:01:35

QUESTIONS OR COMMENTS?

Country	CALL	OR VISIT US ONLINE AT
Saudi Arabia	9200-21230	www.samsung.com

Code No. DC68-02713L_EN

WD8754RJF-02713L_EN.indd Sec9:40 2011-02-11 6:01:35

WD8754EJ(A/F/G/H/S/V/W/Z)
WD8752EJ(A/F/G/H/S/V/W/Z)
WD8754RJ(A/F/G/H/S/V/W/Z)
WD8752RJ(A/F/G/H/S/V/W/Z)
WD8754CJ(A/F/G/H/S/V/W/Z)
WD8752CJ(A/F/G/H/S/V/W/Z)
WD8754DJ(A/F/G/H/S/V/W/Z)
WD8752DJ(A/F/G/H/S/V/W/Z)

غسالة ملابس

دليل المستخدم

تخيل **الإمكانات الهائلة**

نشكرك على شراء هذا المنتج من Samsung.
للحصول على خدمة أكثر تكاملاً، الرجاء تسجيل المنتج على موقع

www.samsung.com/register

SAMSUNG

Planet First 100% Recycled Paper

WD8754RJF-02713L_v1_AR.indd 1 2/14/2011 10:42:03 AM

ميزات الغسالة الجديدة من Samsung

ستغير غسالتك الجديدة رؤيتك لعملية الغسيل. حيث تتميز غسالة Samsung بوجود كافة الميزات التي تُحوّل المهام غير المرغوبة إلى عمل ممتع. بدءاً من سعتها ذات الحجم الفائق وحتى استهلاكها الاقتصادي للطاقة.

- **الانتقال من الغسيل إلى التجفيف بواسطة زر واحد**

تمتع بغسيل وتجفيف مريح بدون توقف. فضلاً عن إمكانية اختيارك ٤ برامج تجفيف خاصة لإجراء دورة الغسيل الكلية بما في ذلك دورة التجفيف باستخدام زر واحد.

- يمكن تشغيل برامج التجفيف هذه بمعزل عن برامج الغسيل ومنها

"خزانة" (البرنامج القياسي)، "تجفيف بدرجة حرارة منخفضة"، "الكي"، "مدة التجفيف" (٣٠ إلى ٢٧٠ دقيقة).

- **التأمين ضد عبث الأطفال**

تضمن وظيفة Child Lock (التأمين ضد عبث الأطفال) الحفاظ على الغسالة ضد عبث الأطفال.
تعمل ميزة الأمان هذه على منع الأطفال من العبث بتشغيل الغسالة. كما تقوم بتنبيهك عند تشغيلها.

- **وثوقية غسيل الصوف**

تم اختبار هذه الغسالة حيث اجتازت المواصفات التي حددتها شركة Woolmark لغسل المنتجات الصوفية في الغسالة.
يجب غسل الملابس وفقاً للإرشادات المدونة على الملصق الموجود على الملابس كما حددتها شركتي Woolmark وSamsung.

- **تأجيل التوقف**

تعمل هذه الميزة على تأجيل الدورة حتى ١٩ ساعة تضاف ساعة بعد ساعة وزيادة سهولة استخدام الغسالة لاسيما عندما ترغب في الذهاب للخارج.

- **الغسل السريع**

لا مجال لإهدار الوقت! تمنحك عملية الغسيل التي تستغرق أقل من ٣٠ دقيقة متسعًا من الوقت للخروج في الموعد قبل أن تُحتسب متأخرًا.
لذا يُمثل برنامج Quick Wash (الغسل السريع) في ٢٩ دقيقة حلاً لحياتك المكتظة بالأعمال. الآن يمكنك غسل ملابسك المفضلة في ٢٩ دقيقة فقط!

- **برنامج Delicates (أنسجة رقيقة) و Hand Wash (غسل يدوي)**

غسل الملابس بدرجة حرارة مناسبة وبكمية ملائمة من المياه. باستخدام أسلوب رقيق للعناية الخاصة بملابسك.

- **سخان خزفي للمتانة وتوفير الطاقة (طرازات محددة)**

يتمتع عنصر السخان الخزفي بمقاومة عالية للمياه الشديدة ومساحيق الغسيل مما يزيد من عمر الغسالة.

WD8754RJF-02713L_v1_AR.indd Sec1:2 2/14/2011 10:42:37 AM

- **Air Wash (الغسيل بالهواء)**

يقوم نظام الغسيل بالهواء بإزالة الروائح الكريهة من الأنسجة وتطهيرها دون أن تبتل، مما يزيد من إمكانية غسل العديد من الأشياء غير القابلة للغسل. وتعمل ميزة التطهير في قتل البكتيريا المنتشرة في غبار المنزل، مما يساعد في تخفيف آلام من يعانون من الحساسية.

  - المواد القابلة الغسيل بالهواء : الأقطان والألياف الصناعية وأقمشة الجينز والصوف بما في ذلك المعاطف والبطانيات والأخفة والسترات وأطقم البذلات والوسائد والبطانات والملابس المطرزة والدمى الناعمة مثل الدبة تيدي.
  - الملابس التي لا يمكن تنظيفها بالبخار: الملابس الجلدية والحريرية والمخملية والبطاطين الكهربائية. ولن تقوم تلك الوظيفة بإزالة البقع من الأنسجة.

- **لوحة عرض رسومية رقمية**

تتميز "لوحة العرض الرسومية الرقمية" بوضوحها وسهولة استخدامها مما يعمل على تقليل الضوضاء والمقاطعة إلى أدنى حد. تتيح لك "لوحة العرض الرسومية الرقمية" بالإضافة إلى سهولة تشغيلها إجراء عمليات الضبط بسرعة ودقة للحصول على نتائج غسيل فائقة.

- **باب واسع**

فتحة عريضة جدًا للباب لمشاهدة عملية الغسل بشكل مريح! كما أنها تسمح بإضافة قطع الملابس وإخراجها بسهولة. وخصوصًا القطع كبيرة الحجم، مثل المفروشات والمناشف، إلى آخره.

- **محرك كهربائي مباشر**

نظرًا لأن حاوية الغسيل لا تستخدم الأحزمة أو التروس، تقل الاهتزازات بشكل ملحوظ. وكنتيجة لذلك، فإن هذه الميزة تضمن تشغيل الغسالة بشكل أكثر هدوءً وأكثر خملاً للأعباء.

يحتوى هذا الدليل على معلومات هامة حول عملية التركيب والاستخدام والعناية بغسالة Samsung الجديدة. فيمكنك الرجوع إليه للتعرف على شكل لوحة التحكم، والتعليمات الخاصة بكيفية استخدام الغسالة، بالإضافة إلى التلميحات المتعلقة بالوصول إلى أقصى استفادة من أحدث الميزات والإمكانات المتوفرة بها. يرشدك القسم "**استكشاف المشاكل وحلها ورموز المعلومات**" في صفحة ٣٥ إلى ما يجب عليك فعله في حالة حدوث عطل بغسالتك الجديدة.

WD8754RJF-02713L_v1_AR.indd Sec1:3 2/14/2011 10:42:37 AM

معلومات السلامة

تهانينا على شرائك غسالة Samsung الجديدة. يحتوى هذا الدليل على معلومات هامة حول عملية تركيب الجهاز واستخدامه والعناية به. الرجاء استقطاع الوقت الكافي وقراءة هذا الدليل للانتفاع بكافة فوائد الغسالة ومميزاتها.

ما يجب أن تعرفه حول إرشادات السلامة

يرجى قراءة هذا الدليل بعناية لضمان معرفة كيفية تشغيل الميزات والوظائف المتعددة لجهازك الجديد بسلامة وفاعلية. كما يجب الاحتفاظ به في مكان آمن بالقرب من الجهاز للرجوع إليه في المستقبل. استخدم هذا الجهاز للغرض المُخصص له فقط على النحو الموضح في دليل الإرشادات الذي بين يديك.

لا تغطي التحذيرات وإرشادات السلامة الهامة الواردة في هذا الدليل كافة الظروف والمواقف المحتمل حدوثها. لذا يقع على عاتقك مسؤولية اتباع المنطق السليم والتعامل بحذر ومراعاة الانتباه عند تركيب الغسالة وصيانتها وتشغيلها.

نظرًا لأن إرشادات التشغيل التالية تنطبق على طُرز متعددة، فإن خصائص الغسالة التي تستعملها قد تختلف قليلاً عن تلك الموصوفة في هذا الدليل. كما أن بعض علامات التحذير المذكورة قد تكون غير قابلة للتطبيق. إذا كانت لديك أي أسئلة أو مخاوف، اتصل بأقرب مركز خدمة أو ابحث عن التعليمات والمعلومات عبر الإنترنت على موقع www.samsung.com.

الرموز والاحتياطات الهامة للسلامة

تشير الرموز والعلامات الموجودة في دليل المستخدم الذي بين يديك إلى ما يلي:

خذير	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي إلى **إصابات خطيرة للأشخاص و/أو الموت و/أو تلف في الممتلكات**.
تنبيه	الممارسات الخطيرة أو غير الآمنة التي قد تؤدي **إلى إصابات للأشخاص و/أو تلف في الممتلكات**.
تنبيه	لتقليل احتمال حدوث خطر الحريق أو الانفجار أو الصدمات الكهربية أو الإصابة الجسدية أثناء استخدام الغسالة، اتبع احتياطات السلامة الأساسية التالية:

	ممنوع المحاولة.
	ممنوع الفك.
	ممنوع اللمس.
	اتبع الإرشادات بعناية.
	قم بفصل قابس التيار الكهربي من مقبس الحائط.
	تأكد من توصيل الغسالة بأرضي لمنع حدوث صدمة كهربية.
	اتصل بمركز الخدمة للحصول على تعليمات.
	ملاحظة

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.
لذا يرجى اتباعها بعناية.
بعد قراءة هذا القسم، قم بحفظه في مكان آمن للاستناد إليه كمرجع في المستقبل.

اقرأ كافة الإرشادات أولاً قبل استخدام الجهاز.

يوجد احتمال التعرض للمخاطر. كما هو الحال مع أي أجهزة تستخدم الطاقة الكهربية والأجزاء المتحركة. ولتشغيل هذا الجهاز بأمان، يجب عليك التعرّف على طريقة تشغيله وتوخي الحذر أثناء استخدامه.

WD8754RJF-02713L_v1_AR.indd Sec2:4 2/14/2011 10:42:37 AM

لا تدع الأطفال (أو الحيوانات الأليفة) يلعبون فوق الغسالة أو بداخلها، حيث لا يمكن فتح باب الغسالة بسهولة من الداخل. وقد يصاب الأطفال بإصابات بالغة الخطورة في حالة احتباسهم بداخلها.

تحذير

لم يتم تصميم هذا الجهاز للاستخدام من قِبل أشخاص لديهم نقص في قدرات جسدية أو حسية أو عقلية (بما فيهم الأطفال) أو نقص في المعرفة أو الخبرة، إلا تحت إشراف أو توجيه فيما يخص استخدام هذا الجهاز من قِبل الشخص المسئول عن سلامتهم.

يجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

في حالة تلف القابس (سلك التيار الكهربي)، يجب تغييره من قِبل الشركة المصنّعة أو وكيل الصيانة الخاص بها أو أي فني مؤهل لتفادي التعرض لأي خطر.

يجب وضع الجهاز بالقرب من قابس التيار الكهربي، وصنابير توريد الماء وخراطيم تصريف الماء، بحيث يسهل الوصول إليها.

بالنسبة للغسالات التي تحتوي على فتحات تهوية بقاعدتها، تأكد من عدم سد السجاد أو أية عوائق أخرى لهذه الفتحات.

يُنصح باستخدام مجموعة خراطيم جديدة وعدم استخدام الخراطيم القديمة مرةً أخرى.

WD8754RJF-02713L_v1_AR.indd Sec2:5 2/14/2011 10:42:38 AM

معلومات السلامة

علامات التحذير الصارمة الخاصة بالتركيب

تحذير

يجب تركيب هذا الجهاز بواسطة فني مؤهل أو شركة صيانة متخصصة.
- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربية أو حريق أو انفجار أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

يجب توخي الحذر عند رفع الجهاز لأن وزنه ثقيل

قم بتوصيل سلك الطاقة بمقبس حائط بجهد من ٢٢٠ إلى ٢٤٠ فولت / ٦٠ هرتز أو أعلى من ذلك. ولا تستخدم المقبس إلا لتشغيل هذا الجهاز فقط. بالإضافة إلى ذلك يجب عدم استخدام سلك تمديد.
- قد تؤدي مشاركة مقبس الحائط مع أجهزة أخرى باستخدام مشترك كهرباء أو مد سلك التيار الكهربي إلى حدوث صدمة كهربية أو نشوب حريق.
- تأكد من تطابق كل من الجهد الكهربي والتردد والتيار مع القياسات الخاصة بمواصفات المنتج. قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق. وكذلك الفشل في إدخال قابس التيار الكهربي في مقبس الحائط بإحكام.

قم بإزالة أي مواد غريبة، مثل الأتربة أو الماء من النهايات الطرفية لقابس التيار الكهربي ونقاط الاتصال باستخدام قطعة قماش جافة بانتظام.
- افصل قابس التيار الكهربي ونظفه باستخدام قطعة قماش جافة.
- قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

أدخل قابس التيار الكهربي في مقبس الحائط في الاتجاه الصحيح بحيث يكون اتجاه السلك نحو الأرضية.
- إذا قمت بإدخال قابس الطاقة في المقبس في الاتجاه المعاكس، فقد تتلف الأسلاك الكهربائية الموجودة داخل الكبل وقد يؤدي هذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

احتفظ بجميع مواد التعبئة والتغليف بعيدة تمامًا عن متناول الأطفال، نظرًا لأنها قد تمثل خطورة على الأطفال.
- قد يؤدي وضع الطفل لكيس من أكياس التغليف فوق رأسه إلى إصابته بالاختناق.

في حالة تلف الجهاز أو قابس التيار الكهربي أو سلك التيار الكهربائي، اتصل بأقرب مركز صيانة.

يجب توصيل الجهاز بالأرضي بشكل سليم.
ولا تقم بتوصيل الجهاز بالأرضي بالقرب من أنبوب غاز أو أنبوب ماء بلاستيكي أو سلك تليفون.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار أو مشاكل بالمنتج
- يجب عدم توصيل سلك التيار الكهربي بمأخذ لم يتم توصيله بأرضي بشكل صحيح. وتأكد من أن ذلك يتم وفقًا للقواعد المحلية والقومية.

يجب عدم تركيب هذا الجهاز بالقرب من سخان أو مواد قابلة للاشتعال.
كما يجب عدم تركيب هذا الجهاز في بيئة رطبة أو موقع به زيت أو أتربة أو في مكان يتعرض لضوء الشمس المباشر والماء (قطرات المطر).

يجب عدم تركيب هذا الجهاز في مكان درجة حرارته منخفضة
- قد يؤدي الجليد إلى انفجار الأنابيب

يجب عدم تركيب هذا الجهاز في موقع يكون به تسرب للغاز.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

لا تستخدم محول كهربي.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

لا تستخدم قابس تيار كهربي أو سلك تيار كهربي تالف أو مقبس حائط غير مُحكم.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

يجب عدم جذب سلك التيار الكهربي أو ثنيه بقوة.
يجب عدم لف سلك الطاقة أو طيه.
يجب عدم تعليق سلك الطاقة فوق شيء معدني أو وضع شيء ثقيل فوق سلك التيار الكهربي أو تمرير سلك التيار الكهربي بين أشياء أو دفع سلك التيار الكهربي في المساحة الموجودة خلف الجهاز.
- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق.

WD8754RJF-02713L_v1_AR.indd Sec2:6 2/14/2011 10:42:38 AM

يجب عدم جذب سلك الطاقة عند فصل قابس التيار الكهربي.
- يجب فصل قابس التيار الكهربي عن طريق الإمساك بالقابس.
- قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

لا تضع سلك الطاقة والأنابيب في مكان قد يعرضك للسقوط أرضًا.

تنبيه علامات التنبيه الخاصة بالتركيب

يجب وضع هذا الجهاز بطريقة يمكن من خلالها الوصول إلى قابس التيار الكهربي.
- يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق نتيجة لتسريب الكهرباء.

يجب تركيب الجهاز على أرضية مستوية وصلبة تتحمل وزن الجهاز.
- قد ينتج عن الفشل في اتباع هذه التعليمات وجود اهتزازات أو حَركات أو ضوضاء أو مشاكل غير طبيعية مع المنتج.

تحذير علامات التحذير الصارمة الخاصة بالاستخدام

في حالة تعرض الجهاز لكمية زائدة من الماء، قم بقطع توريد الماء وقطع اتصال الكهرباء بشكل فوري واتصل بأقرب مركز صيانة.
- لا تلمس سلك التيار الكهربي بيدين مُبتلتين
- قد يؤدي الفشل في الالتزام بذلك إلى حدوث صدمة كهربية

في حالة إصدار الجهاز لضوضاء غير طبيعية أو رائحة اشتعال أو دخان، قم بفصل قابس التيار الكهربي فورًا واتصل بأقرب مركز صيانة.
- قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

في حالة وجود تسريب للغاز (مثل غاز البروبان أو الغاز النفطي المُسال، وما إلى ذلك)، يجب تهوية المكان فورًا بدون لمس قابس التيار الكهربي. لا تقم بلمس الجهاز أو سلك الطاقة.
- لا تستخدم مروحة تهوية.
- قد ينتج عن الشرارة حدوث صدمة كهربية أو نشوب حريق.

لا تدع الأطفال يلعبون فوق الغسالة أو بداخلها. كذلك، يجب فصل حامل باب الغسالة عند التخلص من الجهاز.
- في حالة الانحشار داخل الغسالة، قد يتعرض الطفل للاحتجاز والاختناق حتى الموت.

تأكد من إزالة الغلاف (الإسفنج، الفوم) الموجود أسفل الغسالة قبل الاستخدام.

WD8754RJF-02713L_v1_AR.indd Sec2:7 2/14/2011 10:42:38 AM

معلومات السلامة

يجب عدم غسل العناصر الملوثة بالجاز أو الكيروسين أو البنزين أو مرقق الطلاء أو الكحول أو أي مواد أخرى قابلة للاشتعال أو الانفجار.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو نشوب حريق أو انفجار.

يجب عدم فتح باب الغسالة بالقوة أثناء التشغيل (الغسيل/التجفيف/العصر عند درجة حرارة عالية).

- قد ينتج عن اندفاع الماء خارج الغسالة الإصابة بالحروق أو التسبب في أن تصبح الأرض منزلقة.

قد ينتج عن هذا الأمر حدوث إصابات.

- قد يؤدي فتح الباب بالقوة إلى تلف المنتج أو حدوث إصابة.

لا تضع يدك تحت الغسالة.

- قد ينتج عن هذا الأمر حدوث إصابات.

لا تلمس قابس التيار الكهربي بيدين مُبتلتين.

- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية.

يجب عدم إيقاف تشغيل الغسالة وفصل قابس التيار الكهربي أثناء تشغيلها.

- قد يؤدي إدخال قابس التيار الكهربي مرة أخرى في مأخذ الحائط إلى حدوث شرارة ينتج عنها صدمة كهربية أو نشوب حريق.

يجب عدم السماح للأطفال أو الأفراد غير المؤهلين باستخدام هذه الغسالة بدون إشراف. يجب عدم السماح للأطفال بالتسلق فوق الغسالة

- قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو حروق أو إصابة.

لا تضع يدك أو أي كائن معدني أسفل الغسالة أثناء تشغيلها.

- قد ينتج عن هذا الأمر حدوث إصابات.

يجب عدم فصل الجهاز عن طريق جذب سلك الطاقة. بل يجب دائمًا إمساك القابس بإحكام وسحبه في خط مستقيم من المنفذ إلى الخارج.

- قد يؤدي تلف السلك إلى حدوث عطل تماس و/أو حريق و/أو صدمة كهربية

لا تحاول إصلاح الجهاز أو فكه أو تعديله بنفسك.

- يجب عدم استخدام أي منصهر (مثل النحاس أو سلك معدني. وما إلى ذلك) خلاف المنصهر القياسي.
- في حالة وجود حاجة لإصلاح الجهاز أو إعادة تركيبه. اتصل بأقرب مركز صيانة إليك.
- قد ينتج عن الفشل في اتباع هذه التعليمات حدوث صدمة كهربية أو نشوب حريق أو مشاكل تتعلق بالمنتج أو التعرض للإصابة.

في حالة دخول أي مادة غريبة، مثل الماء إلى الجهاز، قم بفصل قابس التيار الكهربي واتصل بأقرب مركز صيانة.

- قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

عندما يصبح خرطوم توريد الماء غير محكم الربط من ناحية الصنبور وينتج عنه تسرب ماء إلى داخل الجهاز، قم بفصل قابس التيار الكهربي.

- قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

يجب فصل قابس التيار الكهربي عند عدم استخدام الجهاز لفترات طويلة أو أثناء العواصف الرعدية أو البرق.

- قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

WD8754RJF-02713L_v1_AR.indd Sec2:8 2/14/2011 10:42:39 AM

علامات التنبيه الخاصة بالاستخدام

تنبيه

عندما يعلق بالغسالة مادة غريبة مثل المنظفات أو الأتربة أو مخلفات الطعام وما إلى ذلك، قم بفصل قابس التيار الكهربي وتنظيف الغسالة باستخدام قطعة قماش مبللة وناعمة.

- قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث تغيير في ألوان الغسالة أو تشويه أو تلف أو صدأ بها.

قد ينكسر الزجاج الأمامي نتيجة حدوث اصطدام قوي. ولذلك يجب الحرص عند استخدام الغسالة.

- قد تحدث إصابة عندما ينكسر الزجاج.

عند حدوث فشل في توريد الماء أو عند إعادة توصيل خرطوم توريد الماء، يجب فتح الصنبور ببطء.
يجب فتح الصنبور ببطء في حالة عدم الاستخدام لفترة طويلة.

- قد يؤدي ضغط الهواء في خرطوم توريد الماء أو أنبوب الماء إلى تلف جزء من الغسالة أو وجود تسرب للماء.

في حالة حدوث خطأ يتعلق بالتصريف أثناء التشغيل، تحقق من وجود مشكلة تتعلق بالتصريف.

- قد يؤدي استخدام الغسالة أثناء تسرب المياه منها نتيجة وجود مشكلة بالتصريف إلى الإصابة بصدمة كهربية أو نشوب حريق نتيجة تسرب كهربي.

يجب إدخال الملابس بالكامل في الغسالة بحيث لا تعلق بالباب.

- قد يؤدي تعلق الملابس بالباب إلى تلف الملابس أو الغسالة. كما قد ينتج عنه حدوث تسرب للماء.

تأكد من إغلاق الصنبور في حالة عدم استخدام الغسالة.

- تأكد من ربط مسمار وصلة خرطوم توريد الماء القلاووظ بإحكام.
- قد يؤدي الفشل في الالتزام بهذا الأمر إلى تلف الجهاز أو حدوث إصابات.

تحقق من عدم تعلق أي مواد غريبة (مخلفات أو خيوط، وما إلى ذلك) بالحاجز المطاطي.

- قد يحدث تسريب للماء إذا لم يتم إغلاق الباب تمامًا.

يجب فتح الصنبور والتحقق من ربط موصل خرطوم الماء بإحكام وعدم وجود تسريب للماء قبل استخدام المنتج.

- في حالة عدم إحكام ربط المسامير أو موصل خرطوم توريد الماء، قد يحدث تسريب للماء.

لتقليل مخاطر حدوث حريق أو انفجار:

- في بعض الحالات، قد يتكون غاز الهيدروجين عند استخدام نظام الماء الساخن، كما هو الحال بالنسبة لسخان الماء الذي لم يُستخدم لمدة أسبوعين أو أكثر. وحيث إن غاز الهيدروجين قابل للانفجار، ففي حالة عدم استخدام نظام الماء الساخن لمدة أسبوعين أو أكثر، قم بفتح كافة صنابير الماء الساخن الموجودة في المنزل، ودع الماء يتدفق لبضعة دقائق قبل استخدام الغسالة، حيث يعمل ذلك على التخلص من غاز الهيدروجين الذي تم تكوينه داخل الصنابير. ونظرًا لأن غاز الهيدروجين قابل للاشتعال، يجب عدم التدخين أو إشعال أي لهب في هذا الوقت، كما يجب إجراء تهوية فورية قبل لمس قابس التيار الكهربي في حالة وجود تسريب للغاز.

WD8754RJF-02713L_v1_AR.indd Sec2:9 2/14/2011 10:42:39 AM

معلومات السلامة

يجب عدم الوقوف فوق الجهاز أو وضع أشياء فوقه (مثل ملابس الغسيل أو الشمعدان المُضاء أو السجائر المشتعلة أو الأطباق أو المواد الكيماوية أو الأشياء المعدنية، وما إلى ذلك).

- قد ينتج عن هذا الأمر الإصابة بصدمة كهربية أو نشوب حريق أو حدوث مشاكل بالمنتج أو وقوع إصابات.

يجب عدم رش مواد متطايرة، مثل المبيدات الحشرية، فوق سطح الجهاز.

- بالإضافة إلى أن هذا الأمر يضر بالإنسان، فقد ينتج عنه أيضًا الإصابة بصدمة كهربية أو نشوب حريق أو حدوث مشاكل بالمنتج.

لا تضع شيئًا يولد مجالاً كهرومغناطيسيًا بالقرب من الغسالة.

- قد ينتج عن هذا حدوث إصابات شخصية نتيجة وجود خلل في وظائف التشغيل.

يجب عدم لمس الماء حيث يكون الماء الذي يتم تصريفه أثناء الغسيل في درجات حرارة عالية أو أثناء دورة التجفيف ساخنًا.

- قد ينتج عن هذا الأمر حدوث حروق أو إصابات شخصية.

يجب عدم غسل مفروشات المقاعد أو السجاد أو الأقمشة (*) المضادة للماء أو عصرها أو تجفيفها ما لم يكن جهازك يتضمن برنامجًا خاصًا لغسل هذه العناصر.

- يجب عدم غسل السجاد السميك أو الثقيل حتى في حالة وجود علامة الغسالة على بطاقة العناية بالمنتج.
- قد يؤدي هذا الأمر إلى حدوث إصابة أو تلف بالغسالة أو بالحوائط أو بالأرضية أو بالملابس نتيجة للاهتزازات غير الطبيعية.

* المفروشات الصوفية أو الأغطية المقاومة للأمطار أو سترات الصيد أو بنطلونات التزلج أو حقائب النوم أو أغطية الحفاضات أو الملابس الرياضية أو أغطية الدراجات والدراجات البخارية والسيارات، وما إلى ذلك.

يجب عدم تشغيل الغسالة في حالة عدم وجود درج المسحوق.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو إصابة جسدية نتيجة لتسرب الماء.

يجب عدم لمس الحوض من الداخل أثناء عملية التجفيف أو بعدها مباشرةً حيث يكون ساخنًا.

- قد ينتج عن هذا الأمر الإصابة بحروق.

يجب عدم وضع اليدين في درج المسحوق بعد فتحه.

- قد ينتج عن هذا الأمر حدوث إصابة جسدية حيث قد تعلق يدك بجهاز إدخال المسحوق بيدك. كما يجب عدم وضع أي أشياء (مثل الأحذية أو بقايا الطعام أو الحيوانات) خلاف الغسيل في الغسالة.
- قد يؤدي هذا الأمر إلى تلف الغسالة أو حدوث إصابة ووفاة في حالة وجود حيوانات أليفة نتيجة للاهتزازات غير الطبيعية.

يجب عدم الضغط على الأزرار باستخدام أدوات حادة مثل المسامير أو السكاكين أو الأظافر، وما إلى ذلك.

- قد ينتج عن هذا الأمر حدوث صدمة كهربية أو إصابة.

يُحظر غسل الملابس التي تحتوي على زيوت أو كريمات أو غسولات، والتي تكون في الغالب موجودة في متاجر المستحضرات الجلدية أو عيادات التدليك.

- قد ينتج عن هذا الأمر تشوه الحاجز المطاطي وتسرب الماء.

يجب عدم ترك أي أشياء معدنية، مثل الدبابيس أو دبابيس الشعر أو مواد التبييض، في الحوض لفترات طويلة من الوقت.

- قد يؤدي هذا الأمر إلى صدأ الحوض.
- وفي حالة بدء ظهور الصدأ على سطح الحوض، قم بتنظيف سطحه باستخدام سائل تنظيف (متعادل) وإسفنج في تنظيفه. ولا تستخدم فرشاة معدنية مطلقًا.

لا تستخدم سائل التنظيف بشكل مباشر. ولا تقم بغسل الملابس أو شطفها أو عصرها في حالة تعلق مسحوق تنظيف جاف بها.

- قد يؤدي هذا الأمر إلى حدوث اشتعال فوري نتيجة للحرارة الناجّة عن تأكسد الزيت.

لا تستخدم الماء القادم من أجهزة تبريد/تسخين الماء.

- قد ينتج عن هذا الأمر حدوث مشاكل في الغسالة.

WD8754RJF-02713L_v1_AR.indd Sec2:10 2/14/2011 10:42:39 AM

لا تستخدم صابون غسل اليدين المتعادل مع الغسالة.
- في حالة تراكمه وتصلبه داخل الغسالة، قد تحدث مشاكل تتعلق بالمنتج مثل تغير الألوان أو الصدأ أو انبعاث روائح كريهة.

لا تغسل عناصر الغسيل كبيرة الحجم مثل المفروشات في شبكة الغسيل.
- يمكنك وضع الجوارب وحمالات الصدر في شبكة الغسيل وغسلها مع بقية ملابس الغسيل.
- يؤدي التقصير في الالتزام بهذا الأمر إلى حدوث إصابة نتيجة للاهتزازات غير الطبيعية.

لا تستخدم مسحوق غسيل متيبس.
- قد يحدث تسرب للماء في حالة تراكم هذا المسحوق المتيبس داخل الغسالة.

بالنسبة للغسالات التي تحتوي على فتحات تهوية بقاعدتها، تأكد من عدم سد السجاد أو أية عوائق أخرى لهذه الفتحات.

تأكد من إفراغ كافة جيوب الملابس التي سيتم غسلها.
- قد تتسبب الأشياء الصلبة والحادة مثل العملات المعدنية أو الدبابيس أو المسامير أو المسامير القلاووظ أو الأحجار في إحداث أضرار بالغة بالجهاز.

يجب عدم غسل الملابس المزوّدة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

تحذير علامات التحذير الصارمة الخاصة بالتنظيف

لا تنظف الجهاز عن طريق رش الماء فوقه مباشرةً.
لا تستخدم البنزين أو مرقق الطلاء أو الكحول لتنظيف الجهاز.
- قد ينتج عن هذا الأمر حدوث تغير في الألوان أو تشويه أو حدوث صدمة كهربية أو نشوب حريق.

افصل قابس الجهاز من مقبس الحائط قبل تنظيفه أو صيانته.
- قد يؤدي الفشل في الالتزام بهذا الأمر إلى حدوث صدمة كهربية أو نشوب حريق.

WD8754RJF-02713L_v1_AR.indd Sec2:11 2/14/2011 10:42:40 AM

المحتويات

إعداد الغسالة ١٣

١٣ **فحص الأجزاء**
١٤ **استيفاء متطلبات التركيب**
١٤ مصدر الطاقة الكهربية والتوصيل الأرضي
١٤ توريد الماء
١٥ التصريف
١٥ التثبيت الأرضي
١٥ درجة الحرارة المحيطة
١٥ تركيب القنطرة أو الخزانة
١٥ **تركيب الغسالة**

غسل الملابس ٢١

٢١ **الغسل للمرة الأولى**
٢١ **إرشادات أساسية**
٢٢ **استخدام لوحة التحكم**
٢٥ Child Lock (التأمين ضد عبث الأطفال)
٢٥ Sound off (إيقاف تشغيل الصوت)
٢٥ Delay End (تأجيل التوقف)
٢٥ وظيفة التصريف فقط
٢٦ Air Wash (الغسيل بالهواء)
٢٧ **Drying (تجفيف)**
٢٩ غسل الملابس باستخدام قرص تحديد الدورة
٢٩ غسل الملابس يدويًا
٣٠ **إرشادات حول الغسل**
٣١ **معلومات حول مسحوق الغسيل والمواد الإضافية**
٣١ مسحوق الغسيل الذي يمكن استخدامه
٣١ درج مسحوق الغسيل

تنظيف الغسالة وصيانتها ٣٢

٣٢ **تصريف الماء من الغسالة عند الطوارئ**
٣٢ **تنظيف الأسطح الخارجية**
٣٣ **تنظيف درج مسحوق الغسيل والجزء الداخلي منه**
٣٣ **تنظيف مصفاة المخلفات**
٣٤ **تنظيف المصفاة الشبكية المتصلة بخرطوم الماء**
٣٤ **إصلاح غسالة متجمدة**
٣٤ **تخزين الغسالة**

استكشاف المشاكل وحلها ورموز المعلومات ٣٥

٣٥ **تحقق مما يلي إذا كانت الغسالة...**
٣٦ **رموز المعلومات**

جدول الدورات ٣٧

٣٧ **جدول الدورات**

الملحق ٣٨

٣٨ **جدول العناية بالأقمشة**
٣٨ **حماية البيئة**
٣٨ **بيان التوافق**
٣٩ **المواصفات**

WD8754RJF-02713L_ v1_AR.indd Sec3:12 2/14/2011 10:42:40 AM

إعداد الغسالة

تأكد من اتباع فني التركيب لهذه الإرشادات بدقة حتى تعمل غسالتك الجديدة بشكل صحيح ولتجنب حدوث مخاطر الإصابة عند القيام بالغسيل.

فحص الأجزاء

أخرج الغسالة بحرص من صندوقها وتأكد من وجود كافة الأجزاء الموضحة أدناه. في حالة تلف الغسالة أثناء عملية الشحن أو عدم استلامك لكافة الأجزاء، اتصل بخدمة عملاء Samsung أو الموزّع المعتمد لدى Samsung.

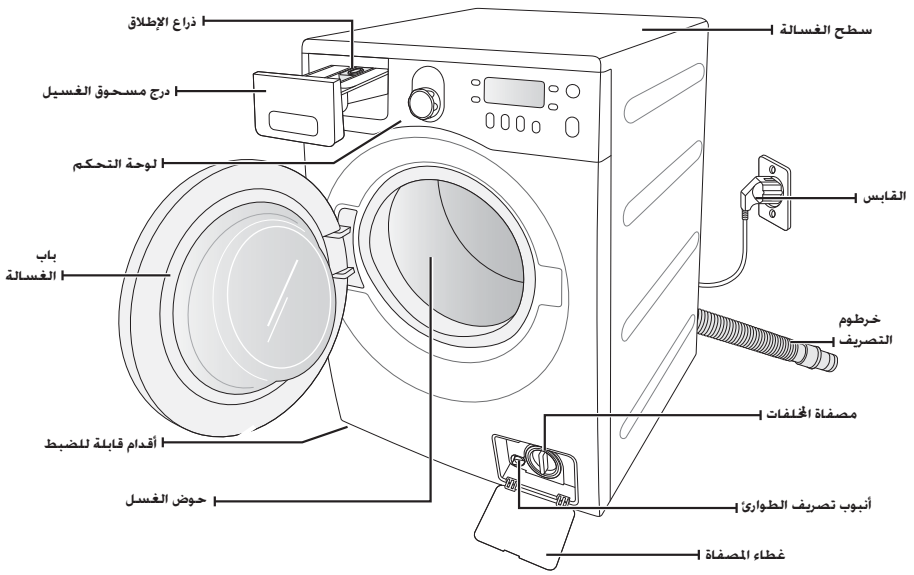

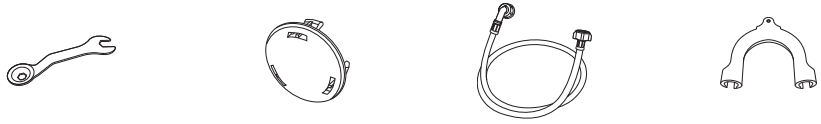

مفتاح الصواميل | •أغطية مفاتيح المسامير: | خرطوم توريد الماء | حامل الخرطوم

• **أغطية فتحات المسامير** : يختلف عدد أغطية فتحات المسامير باختلاف الطراز (من ٣ إلى ٥ أغطية).

WD8754RJF-02713L_v1_AR.indd Sec4:13 2/14/2011 10:42:40 AM

إعداد الغسالة

استيفاء متطلبات التركيب

مصدر الطاقة الكهربية والتوصيل الأرضي

لتفادي خطر حدوث حريق أو التعرض لصدمة كهربية أو إصابة جسدية، يجب أن تتم عملية توصيل الأسلاك والتوصيل الأرضي وفقًا لأحدث نسخة من اللائحة الوطنية للكهرباء ANSI/FNPA، رقم ٧٠ والقوانين والضوابط المحلية. يتحمل مالك هذا الجهاز مسؤولية توفير الصيانة الكهربائية الكافية للجهاز.

⚠ ممنوع استخدام كبلات إضافية.
تحذير استخدم سلك التيار الكهربي المرفق مع الغسالة فقط.

عند الإعداد لعملية التركيب، تأكد أن إمداد التيار الكهربي يتوفر فيه:
- قاطع دائرة كهربية أو منصهر بجهد ٢٢٠ إلى ٢٤٠ فولت تيار متردد / ٦٠ هرتز
- دائرة كهربية فرعية منفصلة تخدم تشغيل الغسالة فقط

يجب توصيل الغسالة بمأخذ أرضي. وفي حالة حدوث خلل أو تعطل في الأداء، يعمل التوصيل الأرضي على تقليل خطورة التعرض لصدمة كهربية، وذلك بتوفير مسار لأقل مقاومة للتيار الكهربي.
يتم تزويد الغسالة بسلك تيار كهربي به قابس أرضي بثلاثة سنون لاستخدامه في المأخذ الأرضي المُركب بشكل صحيح.

لا تقم مطلقًا بتوصيل السلك الأرضي بخطوط مواسير السباكة البلاستيكية أو خطوط الغاز أو مواسير الماء الساخن.

قد يؤدي التوصيل غير الصحيح للموصل الأرضي الخاص بالغسالة إلى حدوث صدمة كهربية.
استشر فني كهرباء مؤهلاً أو فني صيانة إذا لم تكن متأكدًا من صحة التوصيل الأرضي للغسالة. يُحظر تعديل القابس المرفق مع الغسالة. وفي حالة عدم توافقه مع مخرَج التيار، استعن بفني كهرباء مؤهل لتركيب مخرَج مناسب.

توريد الماء

يتم ملء الغسالة بشكل سليم عندما يكون ضغط الماء من ٥٠ إلى ٨٠٠ كيلو باسكال. قد يتسبب ضغط الماء الأقل من ٥٠ كيلو باسكال في تلف صمام الماء مما لا يسمح بإغلاقه كليةً. أو قد تستغرق الغسالة وقتًا أطول مما تسمح به عناصر التحكم لملئها بالماء، مما ينتج عنه إيقاف تشغيل الغسالة. (يتم تضمين نظام تحديد وقت ملء الغسالة في عناصر التحكم والذي تم تصميمه للحد من عمليات تدفق/فيضان الماء في حالة ارتخاء الخرطوم الداخلي.)

يجب أن تكون صنابير الماء على بُعد ٤ أقدام (١٢٢ سم) من الجانب الخلفي للغسالة لتسهيل وصول خراطيم توريد الماء المرفقة إلى الغسالة.

تقوم معظم متاجر توريد المواسير ببيع خراطيم توريد الماء بمختلف أطوالها التي تصل إلى ١٠ أقدام (٣٠٥ سم).

يمكنك تقليل مخاطر تسرب الماء أو تلوثه عن طريق:
- تيسير وصول الخراطيم إلى صنابير الماء.
- إغلاق الصنابير في حالة عدم تشغيل الغسالة.
- الفحص الدوري للتأكد من عدم تسرب الماء من تجهيزات خراطيم توريد الماء.

⚠ افحص كافة التوصيلات الموجودة في صمام وصنابير الماء للتحقق مما إذا كان هناك أي تسريب قبل استخدام الغسالة للمرة
تحذير الأولى.

WD8754RJF-02713L_ v1_AR.indd Sec4:14 2/14/2011 10:42:40 AM

التصريف

توصي Samsung باستخدام ماسورة رأسية بارتفاع ٦٥ سم ويجب تمرير خرطوم التصريف من خلال ماسك خرطوم التصريف حتى يصل إلى الماسورة الرأسية. ويجب أن تكون الماسورة الرأسية كبيرة بدرجة كافية لتسمح بإدخال القطر الخارجي لخرطوم التصريف، الذي يقوم المصنّع بإرفاقه.

التثبيت الأرضي

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء. قد تحتاج الأسطح الخشبية إلى تقويتها لتقليل الاهتزاز و/أو الأحمال غير المتوازنة. تكون طريقة بسط السجاد على الأرضيات بالإضافة إلى أسطح البلاط الناعمة بمثابة عوامل مساهمة في عمليات الاهتزاز واحتمالية تحرك الغسالة بشكل طفيف أثناء دورة العصر.

لا تقم مطلقًا بتركيب الغسالة على أرضية أو بنية ضعيفة.

درجة الحرارة المحيطة

لا تقم بتركيب الغسالة في مناطق قد يتجمد فيها الماء، حيث إن الغسالة تحتفظ دومًا ببعض الماء في صمام الماء والمضخة ومناطق من الخرطوم. فمن الممكن أن يتسبب الماء المتجمد الموجود في المواسير في إلحاق ضرر بالسيور والمضخة والمكونات الأخرى.

تركيب القنطرة أو الخزانة

لتشغيل الغسالة بشكل آمن وسليم، يجب توفير الحد الأدنى من الفراغات حولها كما يلي:

الجوانب ـــ ٢٥ ملليمتر	الجزء الخلفي ـــ ٥١ ملليمتر
الجزء العلوي ـــ ٢٥ ملليمتر	الواجهة ـــ ٤٦٥ ملليمتر

في حالة تركيب الغسالة والمجفف معًا، يجب أن يحتوي الجزء العلوي للقنطرة أو الخزانة على فتحة هواء غير مسدودة مساحتها ٤٦٥ سم على الأقل. لا تتطلب الغسالة وحدها فتحة هواء بعينها.

تركيب الغسالة

الخطوة رقم ١

اختيار مكان الغسالة

قبل تركيب الغسالة، تأكد من توفر ما يلي في المكان الذي قمت باختياره:

- سطح صلب ومستو دون وجود سجاد أو أرضية قد تعوق عملية التهوية
- مكان بعيد عن أشعة الشمس المباشرة
- تهوية كافية
- لا يصل إلى مرحلة التجمد (أقل من ٣٢ درجة فهرنهايت أو ٠ درجة مئوية)
- يكون بعيدًا عن مصادر الحرارة مثل البترول أو الغاز
- تتوفر به مساحة كافية حتى لا يتم وضع الغسالة على سلك التيار الكهربي

WD8754RJF-02713L_v1_AR.indd Sec4:15 2/14/2011 10:42:41 AM

إعداد الغسالة

الخطوة رقم ٢

قم بفك مسامير الشحن

قبل تركيب الغسالة، تجب إزالة كافة مسامير الشحن من اللوحة الخلفية للجهاز.

١. قم بفك جميع المسامير بواسطة مفتاح الصواميل المرفق مع الجهاز.

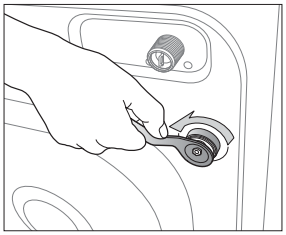

٢. امسك الصواميل بواسطة مفتاح الصواميل واسحبها من خلال الجزء العريض للفتحة. كرر ذلك مع كل مسمار.

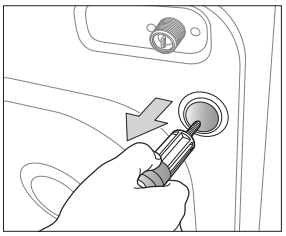

٣. قم بتغطية جميع الفتحات باستخدام الأغطية البلاستيكية المرفقة مع الجهاز.

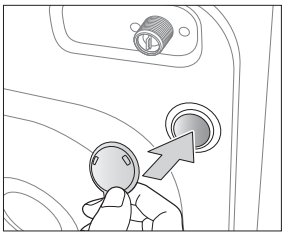

٤. قم بحفظ مسامير الشحن في مكان بعيد آمن. فقد تحتاج إلى نقل الغسالة إلى مكان آخر في المستقبل.

⚠ تحذير: قد تشكل مواد التعبئة خطورة على الأطفال؛ احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين، إلخ.) بعيدًا عن متناول الأطفال.

WD8754RJF-02713L_ v1_AR.indd Sec4:16 2/14/2011 10:42:41 AM

الخطوة رقم ٣

ضبط استواء أرجل الغسالة

عند تركيب الغسالة، تأكد من توصيل قابس التيار الكهربي وخرطوم توريد الماء وخرطوم التصريف بسهولة.

١. ضع الغسالة في المكان المناسب.

٢. اجعل الغسالة مستوية عن طريق لف أقدام ضبط الاستواء إلى الداخل والخارج يدويًا كما هو مطلوب.

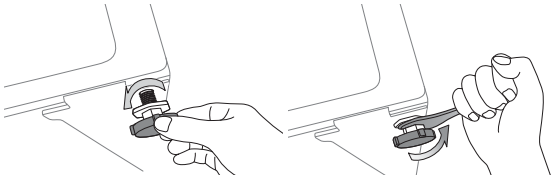

٣. عند استواء الغسالة، أحكم ربط الصواميل باستخدام مفتاح الربط المرفق مع الغسالة.

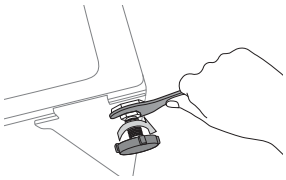

الخطوة رقم ٤

توصيل الماء والتصريف

توصيل خرطوم توريد الماء

١. استخدم مثبت الذراع الذي على شكل حرف L الخاص بخرطوم توريد الماء البارد وقم بتوصله إلى مدخل توريد الماء البارد الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.

يجب توصيل أحد طرفي خرطوم توريد الماء بالغسالة والطرف الآخر للخرطوم بصنبور الماء. لا تمط خرطوم توريد الماء. إذا كان الخرطوم قصيرًا جدًا، استبدل به خرطومًا أطول يتحمل الضغط العالي.

٢. صل الطرف الآخر لخرطوم توريد الماء البارد بصنبور الماء البارد وأحكم تثبيته يدويًا. يمكنك، إذا لزم الأمر، إعادة توصيل خرطوم الماء بالغسالة من خلال إرخاء مثبت الخرطوم ولفه وإعادة ربطه بإحكام.

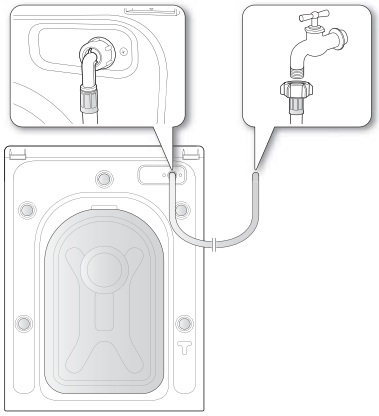

بالنسبة للطرز المحددة المزودة بمدخل إضافي لتوريد الماء الساخن:

١. استخدم مثبت الذراع الذي على شكل L الأحمر الخاص بخرطوم توريد الماء الساخن وقم بتوصيلة بمدخل توريد الماء الساخن الموجود في الجانب الخلفي من الغسالة. وأحكم ربطه يدويًا.

٢. صل الطرف الآخر لخرطوم توريد الماء الساخن بصنبور الماء الساخن وأحكم تثبيته يدويًا.

٣. استخدم خرطوم على شكل Y إذا أردت استخدام الماء البارد فقط.

WD8754RJF-02713L_v1_AR.indd Sec4:17 2/14/2011 10:42:42 AM

إعداد الغسالة

توصيل خرطوم توريد الماء (طرُز محددة)

١. قم بفك المحوّل من خرطوم توريد الماء.

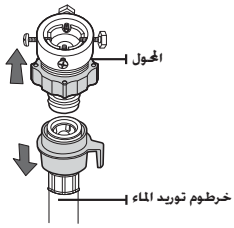

٢. أولاً، باستخدام مفك براغي من نوع "+"، قم بفك المسامير الأربعة الموجودة بالمحول.
ثم أخرج المحوّل ولف الجزء رقم (٢) باتجاه السهم حتى تكون هناك مسافة مقدارها ٥ مم بينهما.



٣. قم بتوصيل المحوّل بصنبور الماء عن طريق ربط المسامير القلاووظ بإحكام أثناء رفع المحوّل لأعلى.
اجعل الجزء (٢) باتجاه السهم ووصل الجزء (١) و(٢).

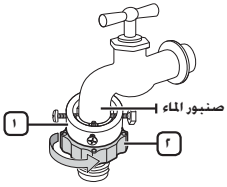

٤. قم بتوصيل خرطوم توريد الماء بالمحوّل. عند إرخاء الجزء (٣)، يتصل الخرطوم بالمحول تلقائياً محدثاً صوت "طقطقة".

بعد توصيل خرطوم توريد الماء بالمحوّل، تأكد من توصيله بشكل صحيح عن طريق جذب خرطوم توريد الماء لأسفل.

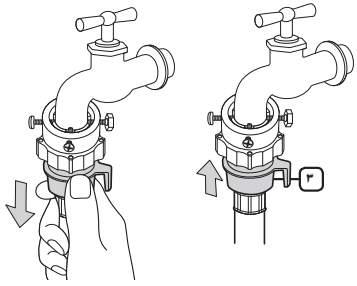

٥. قم بتوصيل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود بالجانب الخلفي من الغسالة. لف خرطوم توريد الماء في اتجاه عقارب الساعة حد النهاية.

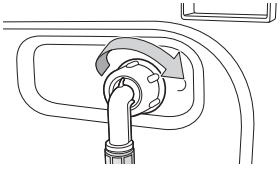

WD8754RJF-02713L_.v1_AR.indd Sec4:18 2/14/2011 10:42:42 AM

١. قم بتشغيل مصدر توريد الماء وتأكد من عدم وجود تسريبات من صمام الماء أو الصنبور أو المحوّل. قم بتكرار الخطوات السابقة في حالة تسريب الماء.

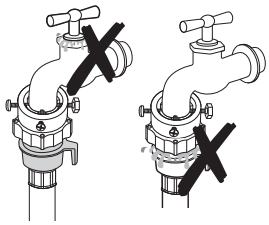

تحذير ⚠ لا تستخدم الغسالة في حالة تسريب الماء، فقد يتسبب ذلك في حدوث صدمة كهربية أو إصابة جسدية.

- إذا كان صنبور الماء من النوع القلاووظ، قم بتوصيل خرطوم توريد الماء إلى الصنبور كما هو موضح.

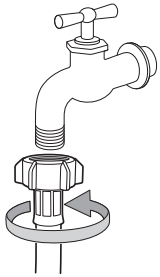

استخدم صنبورًا من النوع التقليدي جدًا لتوريد الماء. إذا كان الصنبور مربعًا أو كبيرًا جدًا، أزل الحلقة الفاصلة قبل إدخال الصنبور في المحوّل.

WD8754RJF-02713L_ v1_AR.indd Sec4:19 2/14/2011 10:42:43 AM

إعداد الغسالة

توصيل خرطوم التصريف

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

١. **فوق حافة حوض الغسيل:** يجب وضع خرطوم التصريف على ارتفاع يتراوح بين ٦٠ و٩٠ سم. وللحفاظ على انثناء خرطوم التصريف، استخدم حامل الخرطوم البلاستيكي المرفق. ثبت الموجه على الجدار بواسطة خطاف أو في الصنبور بواسطة سلك أو حبل لمنع حركة خرطوم التصريف.

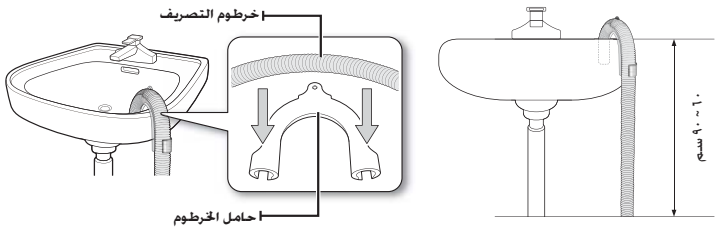

٢. **في فرع أنبوب تصريف الحوض:** يجب أن يكون فرع أنبوب التصريف فوق سباكة الحوض بحيث يكون طرف الخرطوم على ارتفاع ٦٠ سم على الأقل عن الأرض.

٣. **في أنبوب تصريف:** نوصي باستخدام أنبوب عمودي بارتفاع ٦٥ سم؛ على ألا يقل طوله عن ٦٠ سم ولا يزيد عن ٩٠ سم.

يتطلب خرطوم تصريف الماسورة الرأسية ما يلي:

- قطر يبلغ ٥ سم بحد أدنى.
- سعة جرف تبلغ ٦٠ لترا في الدقيقة بحد أدنى.

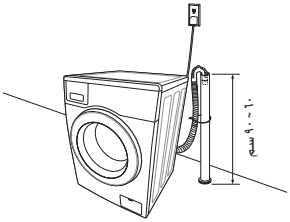

الخطوة ٥

تشغيل الغسالة

قم بتوصيل سلك التيار الكهربي بمقبس حائط بمخرج تيار كهربي معتمد لتيار متردد بجهد كهربي من ٢٢٠ إلى ٢٤٠ فولت و٦٠ هرتز محمي بمنصهر أو قاطع دائرة كهربائية. (لمزيد من المعلومات حول متطلبات التوصيل الكهربائي والأرضي، راجع صفحة رقم ١٤.)

WD8754RJF-02713L_ v1_AR.indd Sec4:20 2/14/2011 10:42:44 AM

غسل الملابس

مع الغسالة الجديدة من Samsung، يكون الأمر الأكثر صعوبة هو تحديد الكمية التي يجب غسلها أولاً.

الغسل للمرة الأولى

قبل غسل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة (أي بدون ملابس).

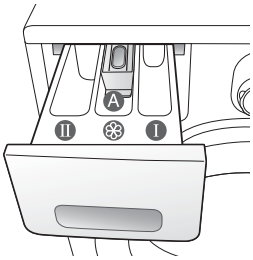

١. اضغط الزر **Power (تشغيل)**.
٢. أضف كمية قليلة من مسحوق الغسيل في الجزء المخصص له (II) في درج المسحوق.
٣. قم بتشغيل توريد الماء المتصل بالغسالة.
٤. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

يؤدي ذلك إلى إزالة الماء المتبقي في الغسالة نتيجة التشغيل الاختباري الذي قامت به الشركة المصنّعة للغسالة.

الدرج (I): مسحوق للغسل الأولي أو نشا.
الدرج (II): مسحوق الغسيل لدورة الغسل الرئيسية ومواد تنقيه الماء ومواد تنقيه الماء ومواد ما قبل النقع ومادة التبييض ومواد إزالة البقع.
الدرج (❀): المواد الإضافية، مثل مكون أو منعم الأقمشة (املأ الدرج بحيث لا تتجاوز الحافة السلفية (الحد الأقصى) العلامة "A")

إرشادات أساسية

١. قم بوضع الملابس في الغسالة.

تحذير: لا تتجاوز الوزن المحدد للغسالة. لتحديد سعة الوزن لنوع الملابس التي ترغب في غسلها، راجع الجدول الموجود في صفحة رقم ٣٠.

- تأكد من أن الملابس غير عالقة بالباب، حيث قد يؤدي ذلك إلى تسرب الماء.
- قد يتبقى مسحوق الغسيل في الجزء المطاطي الأمامي للغسالة بعد دورة الغسيل. قم بإزالة أي مسحوق متبقي، لأن ذلك قد يتسبب في تسرب الماء.
- لا تقم بغسل العناصر العازلة للماء.

٢. أغلق الباب حتى يثبت.
٣. قم بتشغيل الغسالة.
٤. أضف المسحوق والمواد الإضافية إلى درج التوزيع.
٥. حدد الدورة والخيارات المناسبة لكمية الملابس التي تمت إضافتها.
سيضيء مؤشر الغسل وسيظهر وقت الدورة المحدد على لوحة العرض.
٦. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

WD8754RJF-02713L_v1_AR.indd Sec5:21 2/14/2011 10:42:45 AM

غسل الملابس

استخدام لوحة التحكم

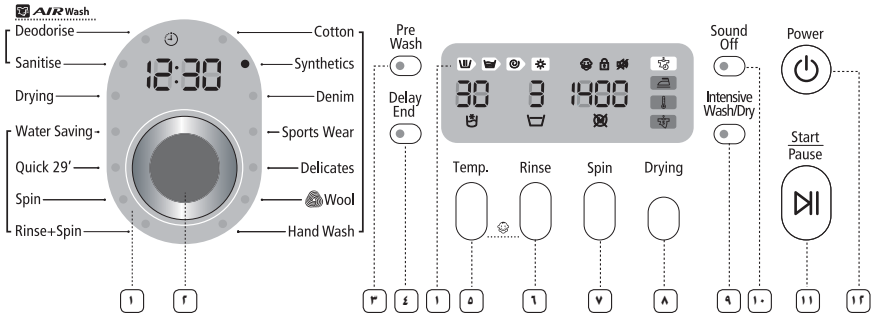

١ **DIGITAL GRAPHIC DISPLAY (لوحة العرض الرسومية الرقمية)**	تعرض الوقت المتبقي لدورة الغسل وكافة المعلومات الخاصة بالدورة ورسائل الخطأ.
٢ **CYCLE SELECTOR (قرص تحديد الدورة)**	حدد نوع التدوير وسرعة العصر للدورة. لمزيد من المعلومات، راجع "غسل الملابس باستخدام قرص اختيار الدورة". (راجع صفحة ٢٩) **Cotton (قطن)** - للملابس القطنية خفيفة الاتساخ وأغطية السرير ومفارش المائدة والملابس الداخلية والمناشف والقمصان، إلخ. **Synthetics (ألياف صناعية)** - لغسل البلوزات والقمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليامايد (البيرلون والنيلون) أو الأنسجة الصناعية الأخرى. **Denim (الجينز)** - يضمن وجود مستوى ماء أعلى في دورة الغسيل الأساسية والشطف الإضافي عدم وجود أي بقايا من مسحوق الغسيل في الملابس. **Sports Wear (ملابس رياضية)** - تُستخدم للملابس المقاومة للماء أو ذات الطبقة العازلة للمحافظة على نظافة مظهرها وجمالها. **Delicates (أنسجة رقيقة)** - للأقمشة الخفيفة وحمالات الصدر والملابس النسائية والفساتين والقمصان والبلوزات. للحصول على أفضل النتائج، استخدم مسحوقًا سائلاً. **Wool (صوف)** - تستخدم هذه الدورة لغسل الملابس الصوفية التي يُسمح بوضعها في الغسالة فقط. يجب أن تقل الحمولة عن ٢ كجم. • تعمل دورة Wool (الصوف) على غسيل الملابس باستخدام حركات اهتزازية خفيفة. أثناء عملية الغسل، تستمر عمليتا الاهتزاز الخفيف والنقع لحماية الألياف الصوفية من الانكماش / التلف وللحصول على نظافة فائقة بسهولة. ولا تعد عملية التوقف هذه مشكلة. • يُنصح باستخدام مسحوق تنظيف عادي لدورة Wool (الصوف)، وذلك للحصول على نتائج غسل رائعة ولعناية فائقة بالألياف الصوفية. تم اعتماد دورة غسل الملابس الصوفية في هذه الغسالة من قبل Woolmark لغسل منتجات Woolmark التي يمكن وضعها في الغسالة شريطة أن يتم غسل المنتجات وفقًا للتعليمات الموجودة على الملصقات الموجودة على الملابس والتعليمات الصادرة من الشركة المصنّعة لهذه الغسالة. M٠٥٠٩ (الرقم المعتمد الصادر من IWS NOM INEE Co., Ltd.). **Handwash (غسل يدوي)** - - دورة غسيل بسيطة كما لو كنتي تغسلين الملابس باليدين. **Air Wash (الغسيل بالهواء)** - استخدم هذا النظام لإزالة الروائح الكريهة من الأنسجة أو تطهيرها، باستثناء الحرير والجلد والمنسوجات الناعمة. • دورة إزالة الروائح الكريهة - إزالة الروائح الكريهة من الملابس • دورة التطهير - إزالة الروائح الكريهة والبكتيريا من الملابس **Drying (التجفيف)** - وظيفة التجفيف فقط، التي تقوم بتنظيف الملابس قبل غسلها أولاً. وتستخدم هذه الوظيفة مُستشعرًا لتحديد وقت التجفيف. **Water Saving (توفير المياه)** - هذه دورة مصممة خصيصًا كي تمكنك من غسل ملابسك بفعالية بأقل قدر من الماء. لقد تم تحديد مواصفات ملصق استهلاك الطاقة بواسطة استخدام البرنامج التالي. إن البرنامج موفر للمياه بنسبة ٤٠ بالمائة، ٣ شطفات، مزكز، بعدد ١٤٠٠ دورة في الدقيقة.

WD8754RJF-02713L_v1_AR.indd Sec5:22 2/14/2011 10:42:46 AM

	'Quick 29 (سريع ٢٩) - تقوم بغسل الملابس في ٢٩ دقيقة. للملابس قليلة الاتساخ. **Spin (عصر)** - إجراء دورة عصر إضافية لإزالة المزيد من الماء. **Spin + Rinse (شطف + عصر)** - للملابس التي تحتاج إلى الشطف فقط أو لإضافة منعم الأقمشة الذي تتم إضافته أثناء الشطف. **Drain Only (التصريف فقط)** - قم بتشغيل **Cycle Selector (قرص اختيار الدورة)** إلى موضع Spin (عصر)، ثم اضغط الزر **Spin (عصر)** ثم اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)** لتصريف المياه.
٣ **زر تحديد PREWASH (غسل أولي)**	اضغط على هذا الزر لتحديد غسل أولي. حيث تتوفر ميزة Pre-wash (غسل أولي) مع الدورات التالية فقط: القطن والألياف الصناعية والجينز والملابس الرياضية.
٤ **زر تحديد DELAY END (تأجيل التوقف)**	اضغط على هذا الزر بشكل متكرر للاختيار من بين خيارات ميزة Delay End (تأجيل التوقف) المتوفرة (من ٣ ساعات إلى ١٩ ساعة بواقع زيادة ساعة واحدة). تشير الساعة المعروضة إلى وقت انتهاء دورة الغسيل.
٥ **زر تحديد TEMPERATURE (درجة الحرارة)**	اضغط هذا الزر بشكل متكرر للتبديل بين خيارات درجة حرارة الماء المتاحة: (ماء بارد و٣٠ و٤٠ و٦٠ و٩٥ درجة مئوية).
٦ **زر تحديد RINSE (شطف)**	اضغط هذا الزر لإضافة دورات شطف إضافية. الحد الأقصى لعدد دورات الشطف هو خمسة.
٧ **زر تحديد SPIN (عصر)**	اضغط هذا الزر بشكل متكرر للتبديل بين سرعات دورة العصر المتاحة. WD8754: و٤٠٠ و١٢٠٠ و٨٠٠ و١٤٠٠ لفة في الدقيقة WD8752: و٤٠٠ و٨٠٠ و١٠٠٠ و١٢٠٠ لفة في الدقيقة **"No spin (بدون عصر)** - تبقى الملابس في الحاوية دون تشغيل دورة العصر بعد تصريف الماء النهائي. **"Rinse Hold (انتظار الشطف)** - يبقى الغسيل منقوعًا في ماء الشطف النهائي. يجب تشغيل دورة Drain (تصريف) أو Spin (عصر) قبل إخراج الملابس.
٨ **زر DRYING (التجفيف)**	يشتمل فقط على العناصر المناسبة لكل من الغسل والتجفيف عند استخدام برنامج الغسل + الشطف. حيث قد تشوه العناصر غير القابلة للتجفيف. حتى إذا تم تجفيفها تحت درجات الحرارة المنخفضة. **Cup Board (الخزانة)** ← **Low Temp (درجة حرارة منخفضة)** ← **Iron (كي)** ← **Time Dry (مدة التجفيف)** (٤٧ دقيقة ← ١:١٧ دقيقة ← ١:٤٧ دقيقة ← ٢:١٧ دقيقة ← ٢:٤٧ دقيقة ← ٣: ١٧ دقيقة ← ٣: ٤٧ دقيقة ← ٤: ١٧ دقيقة ← ٤:٤٧ دقيقة) ← **Cup Board (خزانة)** **"Cup Board (خزانة)** - يتم تجفيف الملابس حتى حد مناسب لها ثم يتم وضعها في الخزانة في نهاية الدورة. ستقوم الغسالة باستخدام المستشعر بتحديد الوقت المطلوب لتجفيف الملابس. **"Low Temp (درجة حرارة منخفضة)** - مصممة للعناصر الحساسة للحرارة. تجفيف الملابس تحت درجة حرارة منخفضة باستخدام مستشعر لتحديد وقت التجفيف. **"Iron (كي)** - هذا الخيار مناسب للملابس التي يتم كيها في الحال بعد نهاية الدورة. حيث يتم ترك الملابس بدرجة خفيفة من الرطوبة لتسهيل الكي. ويقوم المستشعر بتحديد وقت التجفيف. **"Time Dry (مدة التجفيف)** - يتيح لك إمكانية تحديد مدة التجفيف (٣٠ دقيقة ← ٦٠ دقيقة ← ٩٠ دقيقة ← (٤٧ دقيقة ← ١:١٧ دقيقة ← ١:٤٧ دقيقة ← ٢:١٧ دقيقة ← ٢:٤٧ دقيقة ← ٣: ١٧ دقيقة ← ٣: ٤٧ دقيقة ← ٤: ١٧ دقيقة ← ٤:٤٧ دقيقة) • يجب تجنب غسيل الملابس التي قد لا يمكن تجفيفها حيث أنها قد تتعرض للتشوه حتى في درجات الحرارة المنخفضة. • تتعرف الخيارات Cup Board (خزانة) وLow Temp (درجة حرارة منخفضة) و Iron (كي) وTime Dry (مدة التجفيف) على وزن الغسيل حتى يتم عرض وقت دقيق لعملية التجفيف وإجرائها بشكل كامل. • قد تختلف ظروف التجفيف باختلاف نوع الغسيل وحجمه.
٩ **زر تحديد INTENSIVE WASH / DRY (غسل مكثف/تجفيف)**	اضغط هذا الزر مع الملابس المتسخة بشدة والتي تحتاج إلى الغسل بكثافة. تتم زيادة مدة الدورة لكل الدورات. قم بلف قرص اختيار الدورة إلى موضع Drying (تجفيف) ثم اضغط هذا الزر لاستخدام وظيفة التجفيف بسعة ٤ كجم.

WD8754RJF-02713L_v1_AR.indd Sec5:23 2/14/2011 10:42:46 AM

غسـل الملابس

١٠ **زر SOUND OFF (إيقاف تشغيل الصوت)**	يمكن إيقاف تشغيل الصوت لكافة الدورات. عند تحديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لكافة الدورات. • عند تشغيل وظيفة Sound off (إيقاف تشغيل الصوت)، يضيء مصباح زر **Sound Off (إيقاف تشغيل الصوت)** ولوحة التحكم. • عند إيقاف تشغيل وظيفة Sound off (إيقاف تشغيل الصوت)، يصدر صوت جرس وينطفئ مصباح الزر ولوحة التحكم.
١١ **زر تحديد START/PAUSE (تشغيل/إيقاف مؤقت)**	اضغط لإيقاف الدورة مؤقتاً وإعادة تشغيلها.
١٢ **الزر POWER (تشغيل)**	اضغط هذا الزر مرة لتشغيل الغسالة، واضغط عليه مرة أخرى لإيقاف تشغيلها. في حالة عدم الضغط على أي من أزرار الغسالة لمدة تزيد عن ١٠ دقائق أثناء تشغيلها، يتم إيقاف تشغيلها تلقائيًا.

WD8754RJF-02713L_ v1_AR.indd Sec5:24 2/14/2011 10:42:48 AM

Child Lock (التأمين ضد عبث الأطفال)

تمكّنك وظيفة Child Lock (التأمين ضد عبث الأطفال) من قفل الأزرار حتى لا تكون هناك إمكانية لتغيير دورة الغسل التي قمت باختيارها.

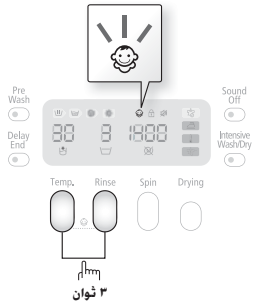

Activating/Deactivating (التنشيط /إلغاء التنشيط)

إذا كنت ترغب في تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال) أو عدم تشغيلها، اضغط على الزرين .**Temp (درجة الحرارة)** و**Rinse (شطف)** في وقت واحد لمدة ٣ ثوان. "ستضيء أيقونة **Child Lock (التأمين ضد عبث الأطفال)**" عند تنشيط هذه الميزة. بحيث تشير إلى أن أيقونة Child Lock ستكون مضاءة عند تنشيطها.

يمكن استخدام الزر **Power (تشغيل)** فقط عند تنشيط وظيفة Child Lock (التأمين ضد عبث الأطفال). ويستمر تشغيل وظيفة Child Lock (التأمين ضد عبث الأطفال) حتى بعد تشغيل الغسالة وإيقاف تشغيلها أو بعد فصل توصيل سلك التيار الكهربائي وإعادة توصيله.

Sound off (إيقاف تشغيل الصوت)

يمكن تحديد وظيفة Sound Off (إيقاف تشغيل الصوت) مع كافة الدورات. عند تحديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لكافة الدورات. حتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر، لا يتغير الإعداد الذي تم اختياره.

Activating/Deactivating (التنشيط /إلغاء التنشيط)

إذا كنت تريد تنشيط وظيفة Sound Off (إيقاف تشغيل الصوت) أو إيقاف تشغيلها، اضغط الزر **Sound Off (إيقاف تشغيل الصوت)**. سيضيء مصباح زر **إيقاف تشغيل الصوت** ولوحة التحكم عند استخدام هذه الميزة.

Delay End (تأجيل التوقف)

يمكنك ضبط الغسالة لإجراء عملية الغسل تلقائيًا في وقت لاحق عن طريق اختيار تأجيل الوقت من ٣ ساعات حتى ١٩ ساعة. (بزيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.

١. يمكنك ضبط الغسالة تلقائيًا أو يدويًا حسب نوع الملابس التي تريد غسلها.
٢. اضغط على الزر **Delay End (تأجيل التوقف)** بشكل متكرر حتى يتم تعيين وقت التأجيل المطلوب.
٣. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**. يضيء مؤشر "**Delay End (تأجيل التوقف)**"، وتبدأ الساعة بالعد التنازلي حتى تبلغ الوقت المحدد.
٤. لإلغاء وظيفة Delay End (تأجيل التوقف)، اضغط الزر **Power (تشغيل)** ثم قم بتشغيل الغسالة من جديد.

وظيفة التصريف فقط

عندما ترغب في تصريف المياه من الغسالة، اتبع التعليمات الواردة أدناه.

١. اضغط الزر **Power (تشغيل)**.
٢. قم بلف قرص اختيار الدورة إلى وضع Spin (عصر).
٣. اضغط الزر **Spin (عصر)** مرة واحدة حتى تتوقف علامة عدد اللفات في الدقيقة.
٤. يظهر بعد ذلك العدد "١" في عرض الوقت في الوسط.
٥. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

WD8754RJF-02713L_.v1_AR.indd Sec5:25 2/14/2011 10:42:48 AM

غسل الملابس

Air Wash (الغسيل بالهواء)

يقوم نظام الغسيل بالهواء بإزالة الروائح الكريهة من الأنسجة وتطهيرها دون أن تبتل، مما يزيد من إمكانية غسل العديد من الأشياء غير القابلة للغسل. وتعمل ميزة التطهير في قتل البكتيريا المنتشرة في غبار المنزل، مما يساعد في تخفيف آلام من يعانون من الحساسية.

- **المواد القابلة الغسيل بالهواء:** القطن والجينز والألياف الصناعية والصوف، بما في ذلك المعاطف والبطانيات والأحذية والسترات والبذلات والوسائد والبطانات والملابس المطرزة والألعاب الصغيرة، مثل الدمى.
- **المواد غير القابلة الغسيل بالهواء:** الملابس الجلدية والحريرية والمخملية والبطاطين الكهربائية.

- ولن تقوم تلك الوظيفة بإزالة البقع من الأنسجة.
- تناسب هذه الوظيفة غسل عنصران أو أقل في وقت واحد (أقل من ١ كجم)

١. افتح الباب وضع الملابس في الغسالة ثم أغلقه.
٢. اضغط الزر **Power (تشغيل)**.
٣. اختر **Air Wash (الغسيل بالهواء)** عن طريق لف **Cycle Selector (قرص اختيار الدورة)**.
- في كل مرة يتم فيها ضغط الزر، يسير وضع التشغيل وفقًا التسلسل التالي: إزالة الروائح الكريهة، تطهير ...

الوضع	مدة الدورة
Deodorise (إزالة الروائح الكريهة)	٢٩ دقيقة
Sanitise (تطهير)	٥٩ دقيقة

- عند اختيار أحد هذه الخيارات، لا يمكن اختيار زر آخر ولكن يمكنك فقط اختيار وقت تأجيل الإنهاء من الساعة ٣:٠٠ إلى ١٩:٠٠.

٤. أغلق الباب واضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

- لا يمكن اختيار **Air Wash (الغسيل بالهواء)** عند وجود ماء في الحوض. قم بتصريف الماء وحدد **Air Wash (الغسيل بالهواء)**.
- اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)** أو **Power (تشغيل)** لإخراج الغسيل.
- يمكن استخدام العطور أو الأوراق المجفّفة مع برنامج Air Wash (الغسيل بالهواء) لجعل رائحة الملابس جذابة (ورقة واحدة لكل قطعة أو قطعتين).

تجنب إجراء Air Wash (الغسيل بالهواء) للملابس التالية:
- الملابس الحساسة المصنوعة من الجلد والمنك والفرو والحرير، إلخ.
- الملابس الداخلية ذات الأطراف المعقودة وبطانات الدمى التي تحتوي على "غراء" والسترات التي يمكن أن تفقد زينتها.
- قد تنكسر الأزرار الموجودة على الملابس.
- قد تشوه الملابس المقساة بالنشا.
- المفروشات الثقيلة مثل الوسائد الخشبية (مسند الرقبة)
  - الوسائد أو البطانيات المحشوة بالبلاستيك أو النشا وليس القطن.
  - البطانيات الكهربائية
- البطانيات الفروية
- البطانيات ثقيلة الوزن
- الوسائد المصنوعة من اللاتكس

WD8754RJF-02713L_.v1_AR.indd Sec5:26 2/14/2011 10:42:49 AM

DRYING (تجفيف)

راجع الملصق الخاص بسعة التجفيف وتأكد من وضع الملابس في المستوى الذي يقل عن الخط المحدد المخصص للملابس المجففة بوزن ٤ كجم.

١. افتح باب الغسالة، وضع الملابس ثم أغلق الباب مرة أخرى.
٢. اضغط الزر **Power (تشغيل)** ثم اضغط الزر **Drying (تجفيف)**
: سيتم تحديد الدورة القياسية تلقائيًا.
يمكن تحديد خيار التجفيف فقط في دورات مثل القطن والألياف الصناعية والجينز والملابس الرياضية.
٣. حدد الزر **Drying (تجفيف)** كما يلي.

برامج التجفيف

- في كل مرة يتم فيها الضغط على هذا الزر، سيتم تحديد نوع التجفيف بشكل متكرر بالترتيب التالي:
Cup Board (خزانة) ← **Low Temp (درجة حرارة منخفضة)** ← **Iron (كي)** ← **Time Dry (مدة التجفيف)**
(٤٧ دقيقة ← ١:١٧ دقيقة ← ١:٤٧ دقيقة ← ٢:١٧ دقيقة ← ٢:٤٧ دقيقة ← ٣: ١٧ دقيقة ← ٣: ٤٧ دقيقة ← ٤: ١٧ دقيقة ← ٤:٤٧ دقيقة) ← **Cup Board (خزانة)**

- يتيح لك هذا التجميع إمكانية الاختيار من بين خياري الغسل + التجفيف والتجفيف فقط.
- تتوفر الدورة wash + dry (غسل +تجفيف) لدورات الغسل التالية فقط: Cotton (قطن)، Intensive (مكثف)، Quick (سريع)
- قبل تجفيف الملابس، راجع ملصق الملابس لضمان قابليتها للتجفيف.
- بإمكان المجفف تجفيف ما يصل إلى ٤ كجم من الملابس (وزن الملابس المجففة). لن تعمل ميزة التجفيف بصورة مُرضية إذا تم تجاوز هذا الحد.
- تتوفر خيارات التجفيف Auto dry (التجفيف الآلي) وTime Dry (مدة التجفيف).
- تقوم خيارات التجفيف الآلي (Cupboard (الخزانة)، Low Temp (درجة حرارة منخفضة)، Iron (كي)) بتنشيط المستشعرات التي تزن الملابس وتحدد / تعين مدة التجفيف المثلى.
- يتيح لك الخيار Time Dry (مدة التجفيف) اختيار طول مدة التجفيف يدويًا. خيارات مدة التجفيف هي:
(٤٧ دقيقة ← ١ :١٧ دقيقة ← ١:٤٧ دقيقة ← ٢:١٧ دقيقة ← ٢:٤٧ دقيقة ← ٣: ١٧ دقيقة ← ٣: ٤٧ دقيقة ← ٤: ١٧ دقيقة ← ٤:٤٧ دقيقة)
- من المستحسن اختيار الدورة Auto Dry (تجفيف تلقائي) مع كمية الملابس التي تزن أقل من ٣,٥ كجم.
- يوصى باستخدام الخيار Time Dry (مدة التجفيف) عندما يتراوح وزن الملابس بين ٣,٥ و٤ كجم.
- قد يتعذر تغيير الدورة المحددة بعد بدء تشغيل التجفيف في الغسالة.
- في حالة تشغيل الدورة wash + dry (غسل وتجفيف)، يتم ضبط سرعة SPIN (العصر) على الوضع High (عالٍ) بصرف النظر عن دورة الغسل التي قمت بتحديدها، وذلك من أجل تحسين أداء التجفيف
- في حالة عدم توفير الماء البارد في الغسالة، فلن تعمل ميزة التجفيف. يُرجى التأكد من فتح صمام الماء عند استخدام ميزة التجفيف.
- في حالة الرغبة في التجفيف بعد دورة الغسل اليدوي فاضغط لتشغيل الوظيفتين Spin (عصر) وDry (تجفيف) في الوقت نفسه.
- يتم تنشيط ميزة "منع التجعيد" تلقائيًا إذا لم يتم إخراج الملابس من حاوية الغسيل بعد انتهاء التجفيف مباشرةً. وسيتم تشغيل ميزة "منع التجعيد" لمدة ٣٠ دقيقة. مع ظهور End (إنهاء) على لوحة العرض. لإخراج الملابس أثناء تنشيط تلك الميزة، اضغط الزر Start/Pause (تشغيل / إيقاف مؤقت) أو الزر Power (تشغيل) لتمكين فتح الباب.

مدة التجفيف

نوع التجفيف		معلومات	أقصى حمل	مدة التجفيف (أقصى حمل)
Auto Drying (التجفيف الآلي)	Cupboard (خزانة) ( )	١. قم بلف قرص تغيير البرامج حتى تضيء علامة Drying (تجفيف) ٢. اضغط الزر **Intensive Wash/dry (غسل مكثف/تجفيف)**	٣,٥ كجم	١٧٧ دقيقة
	Cupboard (خزانة)	١. قم بلف قرص تغيير البرامج حتى تضيء علامة Drying (تجفيف) ٢. اضغط الزر Intensive Wash (غسل مكثف) ٣. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**	٣,٥ كجم - ٤ كجم	٢٥٧ دقيقة
	Low Temp. (درجة حرارة منخفضة) ( )	١. قم بلف قرص تغيير البرامج حتى تضيء علامة Drying (تجفيف) ٢. اضغط الزر Drying (تجفيف) حتى تضيء علامة الاختيار Low Temp. (درجة حرارة منخفضة) ٣. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**	٢ كجم	١٧٧ دقيقة
	Iron (الكي) ( )	١. قم بلف قرص تغيير البرامج حتى تضيء علامة Drying (تجفيف) ٢. اضغط الزر Drying (تجفيف) حتى تضيء علامة الخيار Iron (الكي) ٣. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**	٢ كجم	٤٧ دقيقة
Time Drying (مدة التجفيف) ( )		١. قم بلف قرص تغيير البرامج حتى تضيء علامة Drying (تجفيف) ٢. اضغط الزر Drying حتى تضيء علامة الاختيار Time Dry (مدة التجفيف) ٣. استمر في الضغط على الزر Drying (تجفيف) حتى تضيء علامة مدة التجفيف التي تريدها ٤. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.	٤ كجم	٢٨٧ دقيقة

WD8754RJF-02713L_v1_AR.indd Sec5:27 2/14/2011 10:42:49 AM

غسـل الملابس

Wash + Dry (غسل وتجفيف)

يمثل ذلك وقت الدورة للتجفيف فقط. الرجاء الرجوع إلى صفحة ٣٧ لمراجعة مدة الغسل في الدورة.

نوع التجفيف		معلومات	أقصى حمل	مدة التجفيف (أقصى حمل)
Auto / Sensor Drying (تجفيف تلقائي / بمستشعر)	Cupboard (خزانة) ( )	١. ضع مقداراً ملائمًا من المسحوق ومُنعّم الأنسجة في درج المسحوق ثم أغلقه مرة أخرى. ٢. قم بلف قرص تغيير البرامج حتى تضيء علامة الغسل التي تريدها (القطن أو الألياف الصناعية أو الجينز أو الملابس الرياضية) ٣. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**	٣,٥ كجم	١٧٧ دقيقة
	Cupboard (خزانة)	١. ضع مقدارًا ملائمًا من المسحوق ومُنعّم الأنسجة في درج المسحوق ثم أغلقه مرة أخرى. ٢. قم بلف قرص تغيير البرامج حتى تضيء علامة الغسل التي تريدها (القطن أو الألياف الصناعية أو الجينز أو الملابس الرياضية) ٣. اضغط الزر **Intensive Wash/dry (غسل مكثف/تجفيف)** ٤. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**	٣,٥ كجم - ٤ كجم	٢٥٧ دقيقة
	Low Temp. (درجة حرارة منخفضة) ( )	١. ضع مقدارًا ملائمًا من المسحوق ومُنعّم الأنسجة في درج المسحوق ثم أغلقه مرة أخرى. ٢. قم بلف قرص تغيير البرامج حتى تضيء علامة الغسل التي تريدها (القطن أو الألياف الصناعية أو الجينز أو الملابس الرياضية) ٣. اضغط الزر **Drying (تجفيف)** حتى تضيء علامة الاختيار Low Temp. (درجة حرارة منخفضة) ٤. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**	٢ كجم	١٧٧ دقيقة
	Iron (الكي) ( )	١. ضع مقدارًا ملائمًا من المسحوق ومُنعّم الأنسجة في درج المسحوق ثم أغلقه مرة أخرى. ٢. قم بلف قرص تغيير البرامج حتى تضيء علامة الغسل التي تريدها (القطن أو الألياف الصناعية أو الجينز أو الملابس الرياضية) ٣. اضغط الزر **Drying (تجفيف)** حتى تضيء علامة الخيار Iron (الكي) ٤. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**	٢ كجم	٤٧ دقيقة
Time Drying (مدة التجفيف) ( )		١. ضع مقدارًا ملائمًا من المسحوق ومُنعّم الأنسجة في درج المسحوق ثم أغلقه مرة أخرى. ٢. قم بلف قرص تغيير البرامج حتى تضيء علامة الغسل التي تريدها (القطن أو الألياف الصناعية أو الجينز أو الملابس الرياضية) ٣. اضغط الزر**Drying (تجفيف)** حتى تضيء علامة الخيار Time Dry (مدة التجفيف) ٤. استمر في الضغط على الزر Drying (تجفيف) حتى تضيء علامة مدة التجفيف التي تريدها ٥. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.	٤ كجم	٢٨٧ دقيقة

- يتم عرض "مدة التجفيف" تلقائيًا عن طريق استشعار وزن الملابس قبل التجفيف لزيادة تأثير التجفيف.
- إذا تم تحديد كلاً من دورتي العصر والتجفيف، فيتم تحديد سرعة العصر تلقائيًا لتحسين كفاءة التجفيف.
- عند استخدام دورة التجفيف، تحقق من فتح صمام الماء.

عند تحديد وظيفة Drying (التجفيف) فقط، حيث يتم تشغيل دورة Spin (العصر) تلقائياً أولاً لتحسين كفاءة التجفيف.

٤. ضع مقدارًا ملائمًا من المسحوق ومنعّم الملابس في درج المسحوق ثم أغلقه مرة أخرى.

٥. اضغط الزر **Start/Pause (تشغيل/إيقاف مؤقت)**.

: يتم القيام بالمهام بطريقة مثلى تلقائيًا بدءًا من الغسل وحتى التجفيف.

- لا يمكن تبديل الدورة المحددة بعد بدء التجفيف.
- إذا قمت بتحديد وظيفة Drying (التجفيف)، سيتم ضبط مستوى "العصر" إلى High (عالٍ) افتراضيًا لزيادة تأثير التجفيف.
- في حالة عدم توفر ماء بارد، لا يتم إجراء التجفيف.
- إذا لم تقم بإخراج الملابس من الحوض بعد انتهاء التجفيف، سيتم القيام بوظيفة "منع التجعيد" لمدة ٣٠ دقيقة تقريبًا مع عرض [End (إنهاء)]. لإخراج الملابس: اضغط أولاً على الزر Start/Pause (تشغيل/إيقاف مؤقت) أو Power (تشغيل) وأخرج الملابس.
- إذا كنت تريد إجراء التجفيف بعد الغسيل باليد، حدد كلاً من SPIN (عصر) و Dry (تجفيف) في نفس الوقت.

WD8754RJF-02713L_v1_AR.indd Sec5:28 2/14/2011 10:42:51 AM

غسل الملابس باستخدام قرص تحديد الدورة

تتيح الغسالة الجديدة غسل الملابس بسهولة. باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. عند اختيار أحد برامج الغسل، تقوم الغسالة بضبط درجة الحرارة ووقت الغسل وسرعات الغسل المناسبة.

١. افتح صنبور الماء.
٢. اضغط الزر **Power (تشغيل)**.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل ومنعّم الأقمشة ومسحوق للغسل الأولي (إذا لزم الأمر) في الحجيرات المناسبة.

تتوفر الميزة Pre-wash (غسل أولي) عند تحديد الدورات: Cotton (قطن) و Synthetics (ألياف صناعية) و Denim (الجينز) و Sports Wear (ملابس رياضية). ويعد الغسل الأولي ضروريًا فقط في حالة الاتساخ الشديد للملابس.

٧. استخدم **Cycle Selector (قرص تحديد الدورة)** لتحديد الدورة المناسبة وفقًا لنوع النسيج: Cotton (قطن) أو Synthetics (الألياف الصناعية) أو Sports Wear (ملابس رياضية) أو Delicates (أنسجة رقيقة) أو Wool (صوف) أو Hand Wash (غسيل يدوي) أو Quick ٢٩' (سريع ٢٩). ستضيء المؤشرات الخاصة بالدورات على لوحة التحكم.
٨. في هذا الوقت، يمكنك التحكم في درجة حرارة الغسل وحجم الشطف وسرعة العصر ووقت التأجيل بالضغط على زر الخيار المناسب.
٩. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** وعندها تبدأ الغسالة في العمل. يضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على لوحة العرض.

خيار Pause (إيقاف مؤقت)

من الممكن إضافة/إزالة قطع الملابس في غضون ٥ دقائق من بدء الغسل.

١. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** لإلغاء قفل الباب.

لا يمكن فتح الباب عندما تكون درجة حرارة الماء "عالية جداً" أو مستوى الماء "عالي جدًا".

٢. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** لإعادة تشغيل الغسالة.

عند انتهاء الدورة:

بعد انتهاء دورة الغسل بالكامل، يتم إيقاف الغسالة تلقائيًا.

١. افتح الباب.
٢. أخرج الملابس.

غسل الملابس يدويًا

يمكنك غسل الملابس يدويًا دون استخدام Cycle Selector (قرص تحديد الدورة).

١. افتح مصدر توريد الماء.
٢. اضغط على زر **Power (تشغيل)** الموجود بالغسالة.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل، وإذا لزم الأمر، أضف منعّم الأقمشة أو مسحوق للغسل الأولي في الحجيرات المناسبة.
٧. اضغط على الزر **Temp (درجة الحرارة)** لتحديد درجة الحرارة المطلوبة. (ماء بارد أو ٣٠ أو ٤٠ أو ٦٠ أو ٩٥ درجة مئوية)
٨. اضغط على الزر **Rinse (شطف)** لتحديد عدد دورات الشطف المطلوبة.
الحد الأقصى لعدد دورات الشطف هو خمسة.
يتم زيادة مدة الغسل وفقًا لعدد الدورات.
٩. اضغط على الزر **Spin (عصر)** لتحديد سرعة العصر.
تتيح لك وظيفة انتظار الشطف إخراج الملابس التي لا تزال مبتلة من الغسالة.
(⊗ : No Spin (بدون عصر)، ⎍ : Rinse Hold (انتظار الشطف))
١٠. اضغط على الزر **Delay End (تأجيل التوقف)** بشكل متكرر للتنقل بين خيارات Delay End (تأجيل التوقف) المتوفرة (من ٣ إلى ١٩ ساعة بواقع زيادة ساعة واحدة). تشير الساعة المعروضة إلى الوقت الذي يتم الانتهاء فيه من عملية الغسل.
١١. اضغط على الزر **Start/Pause (تشغيل/إيقاف مؤقت)** وعندها ستبدأ دورة الغسالة.

WD8754RJF-02713L_v1_AR.indd Sec5:29 2/14/2011 10:42:51 AM

غسل الملابس

إرشادات حول الغسل

اتبع هذه التعليمات البسيطة للحصول على ملابس أكثر نظافة وغسل أكثر فاعلية.

راجع بطاقة العناية الموجودة على الملابس دومًا قبل غسلها.

قم بفرز الملابس وغسلها وفقًا للمعايير التالية:

- بطاقة العناية: قم بفرز الملابس وفصلها إلى أقطان وألياف مخلوطة وألياف صناعية وملابس حريرية وأصواف ورايون.
- اللون: افصل الملابس البيضاء عن الملابس الملونة. اغسل الملابس الملونة الجديدة على حدة.
- الحجم: يعمل وضع الملابس بمختلف أحجامها في غسلة واحدة على تحسين عملية الغسل.
- رقة الملمس: اغسل الملابس الرقيقة على حدة. باستخدام الدورة Delicate (أنسجة رقيقة) للملابس الصوفية والستائر والملابس حريرية الخالصة الجديدة. افحص العلامات الموجودة بالملابس التي تريد غسلها أو راجع جدول العناية بالأقمشة في الملحق.

إفراغ الجيوب

قم بإفراغ كافة جيوب الملابس قبل كل عملية غسل. قد تتسبب الأشياء الصغيرة والصلبة ذات الأشكال غير المنتظمة مثل العملات المعدنية والشفرات والدبابيس وماسكات الورق في تلف الغسالة. لا تقم بغسل الملابس المزوّدة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن. قد تتسبب المعادن المستخدمة في الملابس في تلفها وتلف الحوض. اقلب الملابس المزينة بالأزرار والمطرزة على ظهرها قبل غسلها. إذا تركت سحابات السراويل والسترات مفتوحة أثناء الغسل، فقد يتسبب ذلك في تلف المجفف. يجب إغلاق السحابات وتثبيتها بخيط قبل الغسل. قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل بدء الغسل.

الغسل الأولي للملابس القطنية

تقدم لك الغسالة الجديدة باستخدام مساحيق الغسيل الحديثة أفضل نتائج لعمليات الغسل، ومن ثم فهي موفرة للطاقة والوقت والماء والمسحوق. لكن إذا كانت الملابس القطنية شديدة الاتساخ، استخدم prewash (الغسل الأولي) مع مسحوق الغسيل الذي يستند إلى البروتين.

تحديد سعة تحميل الملابس

لا تتجاوز الوزن المحدد للغسالة حيث يؤدي ذلك إلى الحصول على نتائج غير مرضية. استخدم الجدول التالي لتحديد سعة التحميل لنوع الملابس التي تقوم بغسلها.

نوع القماش	سعة الوزن
الطراز	WD8754 / WD8752
Cotton (قطن) - متوسط/خفيف الاتساخ - شديد الاتساخ	٧,٥ كجم
Synthetics (الألياف الصناعية)	٣ كجم
Denim (الجينز)	٣ كجم
Sports Wear (الملابس الرياضية)	٢,٥ كجم
Delicates (الأنسجة الرقيقة)	٢,٥ كجم
Wool (الصوف)	٢ كجم

- في حالة عدم توازن الملابس ("بضيء **UE**" على الشاشة)، وفي هذه الحالة، أعد توزيع الملابس. حيث يؤدي عدم توازن الملابس إلى تقليل فعالية العصر.
- عند غسل المفروشات أو الأخفة، قد تطول مدة الغسل أو تقل فاعلية العصر.

تأكد من إدخال حمالات الصدر (التي يمكن غسلها في الماء) في شبكة غسيل (يتم شراؤها بشكل منفصل).

- قد تنكسر الأجزاء المعدنية الموجودة في حمالات الصدر مما يؤدي إلى تلف الغسيل. لذا يجب عليك أن تتأكد من وضعها داخل شبكة غسيل جيدة.
- قد تعلق الملابس الصغيرة والخفيفة بالباب مثل الجوارب والقفازات والمنسوجات والمناديل. لذا قم بوضعها داخل شبكة غسيل جيدة.

تنبيه: لا تقم بغسل شبكة الغسيل وحدها دون وجود ملابس بها. فقد يؤدي ذلك إلى حدوث اهتزازات غير طبيعية في الغسالة مما قد يتسبب في حدوث إصابات.

WD8754RJF-02713L_.v1_AR.indd Sec5:30 2/14/2011 10:42:52 AM

معلومات حول مسحوق الغسيل والمواد الإضافية

مسحوق الغسيل الذي يمكن استخدامه

يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (القطن أو الألياف الصناعية أو الأنسجة الرقيقة أو الصوف) والألوان ودرجة حرارة الماء ودرجة الاتساخ. استخدم دومًا مسحوق الغسيل ذي "الرغوة القليلة" والذي صمم خصيصًا للغسالات أمامية التحميل.

اتبع توصيات الشركة المصنعة لمسحوق الغسيل وفقًا لوزن الملابس ودرجة الاتساخ ودرجة نقاء الماء في منطقتك. وإذا لم تكن تعرف ما إذا كان الماء نقيًا أم لا في منطقتك، اتصل بالهيئة المسئولة عن الماء.

لتأكيد أفضل نتائج للغسيل، ينصح بإذابة مسحوق الغسيل في مقدار قليل من الماء قبل إضافته إلى الغسالة.

لا تستخدم منظفًا صلبًا أو خشنًا لأنه قد يتبقى في دورة الشطف. قد يتسبب في أداء الغسالة لدورة الشطف بشكل غير صحيح أو يتسبب في إعاقة تدفق الماء.

الرجاء ملاحظة التعليمات عند استخدام دورة "الصوف".

- استخدم مسحوقًا سائلاً متعادلاً لغسيل الصوف فقط.
- عند استخدامك مسحوق غسيل، فقد يترك أثرًا على الغسيل ويتسبب في تلف الصوف.

درج مسحوق الغسيل

تحتوي الغسالة على حجيرات منفصلة لتوزيع المسحوق ومنعّم الأقمشة. قم بإضافة كافة المواد الإضافية الخاصة بتنظيف الملابس إلى الحجيرات المناسبة قبل بدء تشغيل الغسالة.

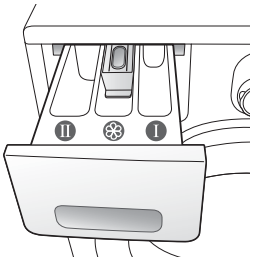

لا تقم بفتح درج المسحوق أثناء تشغيل الغسالة.

١. اسحب درج مسحوق الغسيل الموجود على الجانب الأيسر من لوحة التحكم.
٢. قم بإضافة الكمية الموصى بها من مسحوق الغسيل مباشرة في حجيرة المسحوق Ⅱ قبل تشغيل الغسالة.
٣. قم بإضافة الكمية الموصى بها من منعّم الأقمشة في الحجيرة الخاصة بها ❀ إذا لزم الأمر.

تنبيه: لا تقم بإضافة أي **منظف** مسحوق/سائل إلى حجيرة المنعّم (❀).

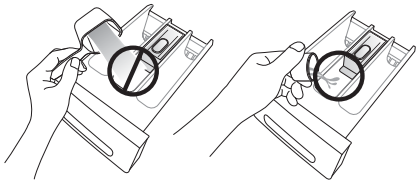

٤. عند استخدام الخيار Pre-wash (غسل أولي)، قم بإضافة الكمية الموصى بها من مسحوق الغسيل في حجيرة الغسل الأولي Ⅰ.

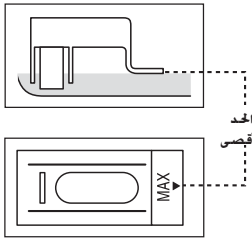

لا تستخدم أنواع المساحيق التالية عند غسل الملابس كبيرة الحجم.

- مساحيق الغسيل التي تكون على شكل ألواح أو أقراص
- المساحيق التي تكون على شكل كرة أو شبكة

يجب إذابة منعّم الأقمشة المركز أو السميك بقليل من الماء قبل صبه في درج التوزيع (لمنع إعاقة تدفق الماء).

تجنب عدم تدفق منعّم الأقمشة عند غلق درج المنظف بعد إضافة منعّم الأقمشة بداخل حجيرة مسحوق الشطف.

WD8754RJF-02713L_v1_AR.indd Sec5:31 2/14/2011 10:42:52 AM

تنظيف الغسالة وصيانتها

يؤدي حفظ الغسالة نظيفة على تحسين أدائها، وتجنب الإصلاحات غير الضرورية، وزيادة عمر الغسالة.

تصريف الماء من الغسالة عند الطوارئ

١. قم بفصل الغسالة من مصدر الطاقة.
٢. افتح غطاء المصفاة باستخدام عملة معدنية أو مفتاح.

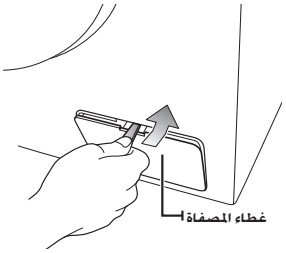

٣. فك غطاء التصريف عند الطوارئ عن طريق لفه لليسار.

٤. أمسك الغطاء من نهاية أنبوب التصريف عند الطوارئ واجذبه ببطء مسافة حوالي ١٥ سم.
٥. اسمح بتدفق الماء بأكمله في وعاء.
٦. أعد إدخال أنبوب التصريف وثبت الغطاء مرة أخرى.
٧. أعد غطاء المصفاة إلى مكانه.

تنظيف الأسطح الخارجية

١. امسح الأسطح الخارجية للغسالة، بما في ذلك لوحة التحكم بقطعة من القماش الناعم ومسحوق تنظيف منزلي غير خادش.
٢. استخدم قطعة من القماش الناعم لتجفيف الأسطح الخارجية.
٣. لا تصب الماء على الغسالة.

WD8754RJF-02713L_ v1_AR.indd Sec6:32 2/14/2011 10:42:54 AM

تنظيف درج مسحوق الغسيل والجزء الداخلي منه

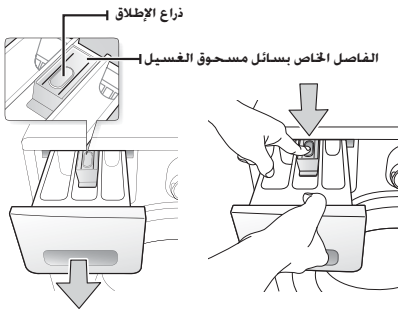

١. اضغط على ذراع الإطلاق الموجود داخل درج مسحوق الغسيل واسحبه إلى الخارج.
٢. قم بإزالة الفاصل الخاص بسائل مسحوق الغسيل من درج مسحوق الغسيل

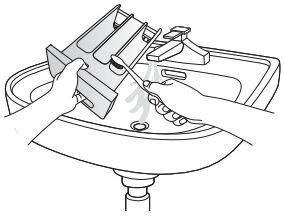

٣. اغسل كافة الأجزاء بالماء الجاري.

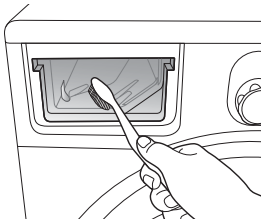

٤. نظف الجزء الداخلي للدرج باستخدام فرشاة أسنان قديمة.
٥. ضع موزّع المسحوق السائل في مكانه عن طريق دفعه بإحكام داخل الدرج.
٦. أعد الدرج إلى مكانه.
٧. قم بتشغيل دورة الشطف دون وجود أي غسيل في الحاوية لإزالة أي مسحوق متبق.

تنظيف مصفاة المخلفات

نوصي بتنظيف مصفاة المخلفات ٥ أو ٦ مرات في العام أو عند عرض رسالة الخطأ "5E". (راجع "تصريف الغسالة عند الطوارئ" في الصفحة السابقة.)

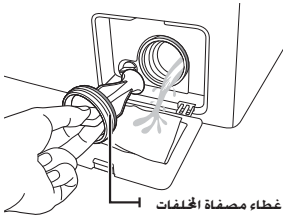

١. افتح غطاء المصفاة باستخدام مفتاح أو قطعة معدنية.
٢. أرخ غطاء التصريف عند الطوارئ بلفه إلى اليسار لصرف الماء من الغسالة.
٣. فك غطاء مصفاة المخلفات.

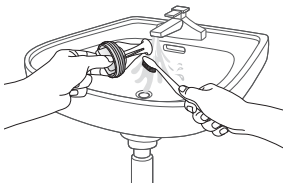

٤. اغسل أي أوساخ أو أي مواد أخرى عالقة في مصفاة المخلفات. تأكد من أن مروحة مضخة التصريف الموجودة خلف مصفاة المخلفات غير مسدودة.
٥. ضع غطاء مصفاة المخلفات في مكانه.
٦. ضع غطاء المصفاة في مكانه.

WD8754RJF-02713L_v1_AR.indd Sec6:33 2/14/2011 10:42:54 AM

تنظيف الغسالة وصيانتها

تنظيف المصفاة الشبكية المتصلة بخرطوم الماء

يجب عليك تنظيف المصفاة الشبكية المتصلة بخرطوم الماء مرة كل عام على الأقل. أو عند ظهور رسالة خطأ "4E":

١. أغلق مصدر توريد الماء إلى الغسالة.
٢. فك الخرطوم من الجانب الخلفي للغسالة. قم بتغطية الخرطوم بقطعة من القماش، لمنع تدفق الماء بسبب الضغط العالي في الخرطوم.
٣. اسحب المصفاة الشبكية إلى الخارج من طرف الخرطوم بلطف باستخدام زرادية واشطفها بالماء حتى تصبح نظيفة. نظف أيضًا الجزأين الداخلي والخارجي للوصلة الملفوفة.
٤. أعد المصفاة إلى مكانها.
٥. ثبت الخرطوم بالغسالة مرة أخرى.
٦. تأكد أن الوصلات محكمة ولا تسرب الماء وقم بتشغيل الصنبور.

إصلاح غسالة متجمدة

إذا انخفضت درجة الحرارة إلى أقل من درجة التجمد وتجمدت الغسالة:

١. افصل الغسالة من مصدر التيار الكهربي.
٢. صب الماء الدافئ على صنبور الماء لفك خرطوم توريد الماء.
٣. قم بإزالة خرطوم توريد الماء وانقعه في الماء الدافئ.
٤. صب الماء الدافئ في حاوية الغسالة واتركه لمدة ١٠ دقائق.
٥. أعد توصيل خرطوم توريد الماء إلى صنبور الماء وتأكد من أن توريد الماء والتصريف يتم كما ينبغي.

تخزين الغسالة

إذا كنت بحاجة إلى تخزين الغسالة لمدة طويلة، فمن المستحسن تصريف الماء منها وفصلها. قد تتلف الغسالة في حالة ترك ماء في الخراطيم والمكونات الداخلية قبل التخزين.

١. اختر الدورة 'Quick 29 (سريع ٢٩') ثم قم بإضافة مادة تبييض في الحجيرة الخاصة بمادة التبييض. قم بتشغيل الغسالة من خلال الدورة دون وجود ملابس بها.
٢. أغلق صنابير الماء وافصل خراطيم توريد الماء.
٣. افصل الغسالة عن مأخذ التيار الكهربي. واترك باب الغسالة مفتوحًا للسماح بدخول الهواء داخل الحاوية.

في حالة قيامك بتخزين الغسالة في درجات حرارة تحت درجات التجمد، اترك فرصة لخروج الماء المتبقي في الغسالة قبل استخدامها.

WD8754RJF-02713L_v1_AR.indd Sec6:34 2/14/2011 10:42:55 AM

استكشاف المشاكل وحلها ورموز المعلومات

تحقق مما يلي إذا كانت الغسالة...

المشكلة	الحل
الغسالة لا تعمل	• تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. • تأكد من إغلاق الباب بإحكام. • تأكد من فتح صنبور (صنابير) مصدر الماء. • تأكد من الضغط على الزر Start/Pause (تشغيل/إيقاف مؤقت).
عدم وجود ماء أو عدم وجود ماء كافٍ	• افتح الصنبور تمامًا. • تأكد من أن خرطوم توريد الماء غير متجمد. • فك ثنيات خراطيم توريد الماء. • نظف المصفاة الموجودة على خرطوم توريد الماء.
يوجد مسحوق غسيل في الدرج بعد اكتمال دورة الغسل	• تأكد من تشغيل الغسالة بضغط ماء كافٍ. • تأكد من إضافة مسحوق الغسيل في منتصف درج المسحوق.
تهتز الغسالة أو تحدث صوتًا مرتفعًا	• تأكد من تركيب الغسالة على سطح مستو. إذا كانت الأرض غير مسطحة، اضبط أقدام الغسالة حتى تستقر على الأرضية. • تأكد من فك مسامير الشحن. • تأكد من عدم ملامسة الغسالة لأي شيء آخر. • تأكد من توزيع وزن الملابس الموجودة في الغسالة.
لا تقم الغسالة بتصريف الماء منها و/أو لا تقم بعملية العصر	• فك الثنيات الموجودة في خرطوم التصريف. قلل من استخدام الخراطيم الملتوية. • تأكد من أن المصفاة الشبكية المتصلة بخرطوم الماء غير مسدودة.
الباب مغلق ولا يمكن فتحه.	• لا يمكن فتح الباب إلا بعد مرور ٣ دقائق على توقف الغسالة عن العمل أو فصل التيار الكهربي.

في حالة استمرار المشكلة، اتصل بمركز خدمة عملاء Samsung المحلي.

WD8754RJF-02713L_v1_AR.indd Sec8:35 2/14/2011 10:42:55 AM

استكشاف المشاكل وحلها ورموز المعلومات

رموز المعلومات

عندما تتعرض الغسالة للعطل، قد يظهر أحد رموز المعلومات على شاشة العرض. في حالة حدوث ذلك، الرجاء التحقق من هذا الجدول وتجربة الحلول المقترحة قبل الاتصال بخدمة العملاء.

رمز الكود	الحل
dE	• أغلق الباب.
4E	• تأكد أن صنبور توريد الماء مفتوح. • تحقق من ضغط الماء.
5E	• نظف مصفاة المخلفات. • تأكد من تركيب خرطوم تصريف الماء بطريقة صحيحة.
UE	• وزن الملابس غير موزّع. قم بإعادة توزيع الملابس. وفي حالة غسيل قطعة واحدة من الملابس، مثل برنس حمام أو جينز، قد لا تكون نتيجة العصر النهائية مرضية. وتظهر رسالة خطأ "UE" في نافذة العرض.
cE/3E	• اتصل بمركز خدمة ما بعد البيع.
ساخن	• ستظهر عندما تكون درجة الحرارة الداخلية في الحاوية مرتفعة. ستعمل المروحة تلقائيًا. لذا يُرجى الانتظار حتى تختفي علامة "**Hot (ساخن)**".

بالنسبة للرموز التي لم تذكر أعلاه، أو في حالة عدم مساهمة الحل المقترح في حل المشكلة، اتصل بمركز خدمة Samsung أو الموزع المحلي المعتمد التابع لـ Samsung.

WD8754RJF-02713L_v1_AR.indd Sec8:36 2/14/2011 10:42:55 AM

جـدول الـدورات

جـدول الـدورات

(● خيار المستخدم)

البرنامج	أقصى وزن (كجم)	مسحوق الغسيل			درجة الحرارة القصوى (درجة مئوية)
	WD8754/ WD8752	Pre-wash (غسل أولي)	غسل	منعم الأقمشة	
Cotton (قطن)	٧,٥	●	نعم	●	٩٥
Synthetics (الألياف الصناعية)	٣,٠	●	نعم	●	٦٠
Denim (الجينز)	٣,٠	●	نعم	●	٦٠
Sports Wear (الملابس الرياضية)	٢,٥	●	نعم	●	٦٠
Delicates (الأنسجة الرقيقة)	٢,٥	-	نعم	-	٤٠
Wool (الصوف)	٢,٠	-	نعم	-	٤٠
Handwash (الغسل اليدوي)	٢,٠	-	نعم	●	٤٠
Deodorise (إزالة الروائح الكريهة)	١,٠	-	-	-	(غير معروض)
Sanitise (تطهير)	١,٠	-	-	-	(غير معروض)
Drying (تجفيف)	٤,٠	-	-	-	(غير معروض)
Water Saving (توفير الماء)	٧,٥	●	نعم	●	٦٠
Quick 29' (سريع ٢٩)	٣,٠	-	نعم	●	٦٠

البرنامج	عدد الدورات في الدقيقة لسرعة العصر (القصوى)		Delay End (تأجيل التوقف)	مدة الدورة (دقيقة)
	WD8754	WD8752		
Cotton (قطن)	١٤٠٠	١٢٠٠	●	١٢٠
Synthetics (الألياف الصناعية)	١٢٠٠	١٢٠٠	●	٩٠
Denim (الجينز)	٨٠٠	٨٠٠	●	٧٨
Sports Wear (الملابس الرياضية)	١٢٠٠	١٢٠٠	●	٧٢
Delicates (الأنسجة الرقيقة)	٨٠٠	٨٠٠	●	٥٠
Wool (الصوف)	٨٠٠	٨٠٠	●	٣٨
Handwash (الغسل اليدوي)	٤٠٠	٤٠٠	●	٣١
Deodorise (إزالة الروائح الكريهة)	-	-	●	٢٩
Sanitise (تطهير)	-	-	●	٥٩
Drying (تجفيف)	-	-	●	٢٥٧
Water Saving (توفير الماء)	١٤٠٠	١٢٠٠	●	١٩٩
Quick 29' (سريع ٢٩)	١٤٠٠	١٢٠٠	●	٢٩

١. تستغرق دورة الغسل الأولي مدة أطول بحوالي ١٥ دقيقة.
٢. تم قياس بيانات مدد الدورات وفقاً للشروط المنصوص عليها في مقياس IEC 60456/EN 60456.
٣. قد تختلف مدة الدورة في كل منزل عن القيم المبينة في الجدول بسبب الاختلاف في ضغط الماء ودرجة الحرارة الخاصة بتوريد الماء وكمية الغسيل ونوعه.
٤. عند تحديد الوظيفة Intensive Wash (غسل مكثف)، تتم زيادة مدة الدورة لكل الدورات.

WD8754RJF-02713L_v1_AR.indd Sec7:37 2/14/2011 10:42:55 AM

الملحق

جدول العناية بالأقمشة

توضح الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية أربعة رموز على النحو التالي: غسيل وتبييض وتجفيف وكي وتنظيف جاف إذا لزم الأمر.
يضمن استخدام هذه الرموز التناسق بين الشركات المصنّعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

	مواد مقاومة		يمكن الكي عند ١٠٠ درجة مئوية كحد أقصى
	الملابس الرقيقة		يحظر الكي
	يمكن الغسيل عند ٩٥ درجة مئوية		يمكن استخدام التنظيف الجاف باستخدام أي مواد مذيبة
	يمكن الغسيل عند ٦٠ درجة مئوية		التنظيف الجاف بالبروكلوريد أو الوقود المخفف أو الكحول النقي أو R113 فقط
	يمكن الغسل عند ٤٠ درجة مئوية		التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R113 فقط
	يمكن الغسيل عند ٣٠ درجة مئوية		يحظر استخدام التنظيف الجاف
	يمكن غسلها باليد		تجفف وهي مفرودة
	تنظيف جاف فقط		يمكن نشرها لتجف
	يمكن استخدام مادة تبييض مع الماء البارد		تجفيف الملابس وهي معلقة على حمالة
	يحظر استخدام مادة تبييض		تجفيف بالتدوير. حرارة عادية
	يمكن الكي عند ٢٠٠ درجة مئوية كحد أقصى		تجفيف بالتدوير. حرارة خفيفة
	يمكن الكي عند ١٥٠ درجة مئوية كحد أقصى		يحظر تجفيفها بالتدوير

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر طاقة. قم بخلع الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
- لا تتجاوز في الكميات الموصى بها لمسحوق الغسيل وفق إرشادات الشركات المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
- وفر الماء والكهرباء من خلال إجراء الغسل بأوزان كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).

بيان التوافق

يتوافق هذا الجهاز مع مقاييس السلامة الأوروبية EC directive 93/68 و EN Standard 60335.

WD8754RJF-02713L_ v1_AR.indd Sec9:38 2/14/2011 10:42:55 AM

المواصفات

النوع			غسالة أمامية التحميل	
الأبعاد			WD8754CJ/WD8754DJ/WD8754EJ/WD8754RJ WD8752CJ/WD8752DJ/WD8752EJ/WD8752RJ	
			العرض ٥٩٨ مم × العمق ٦٠٠ مم × الارتفاع ٨٤٤ مم	
ضغط الماء			٥٠ كيلو باسكال ~ ٨٠٠ كيلو باسكال	
كمية الماء			٥٦ لتر	
الوزن الصافي			WD8754CJ/ WD8754DJ/ WD8754EJ/ WD8754RJ	WD8752CJ/ WD8752DJ/ WD8752EJ/ WD8752RJ
			٧٠ كجم	١٩ كجم
سعة الغسل والعصر			٧,٥ كجم [غسيل جاف]	
سعة التجفيف			٤ كجم	
استهلاك الطاقة	الطراز		WD8754CJ/WD8754DJ/WD8754EJ/WD8754RJ WD8752CJ/WD8752DJ/WD8752EJ/WD8752RJ	
	الغسل		٢٢٠ فولت	١٥٠ واط
			٢٤٠ فولت	١٥٠ واط
	الغسل والتسخين		٢٢٠ فولت	٢٠٠٠ واط
			٢٤٠ فولت	٢٤٠٠ واط
	التجفيف		٢٣٠ فولت	١٦٠٠ واط
	العصر	الطراز	WD8754CJ/ WD8754DJ/ WD8754EJ/ WD8754RJ	WD8752CJ/ WD8752DJ/ WD8752EJ/ WD8752RJ
		٢٣٠ فولت	٣٥٠ واط	٢٥٠ واط
	الضخ		٣٤ واط	
وزن العبوة	الطراز		WD8754CJ/WD8754DJ/WD8754EJ/WD8754RJ WD8752CJ/WD8752DJ/WD8752EJ/WD8752RJ	
	الغلاف الورقي		٢,٥ كجم	
	الغلاف البلاستيكي		٢,٥ كجم	
دورات العصر	الطراز		WD8754CJ/ WD8754DJ/ WD8754EJ/ WD8754RJ	WD8752CJ/ WD8752DJ/ WD8752EJ/ WD8752RJ
	دورة في الدقيقة		١٤٠٠	١٢٠٠

قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تحسين المنتج.

WD8754RJF-02713L_v1_AR.indd Sec9:39 2/14/2011 10:42:58 AM

هل لديك أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت على
Saudi Arabia	9200-21230	www.samsung.com

كود رقم. DC68-02713L_AR